



ETD29PKB

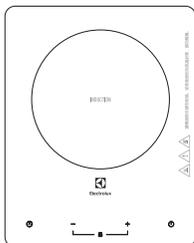

ETI29MKC

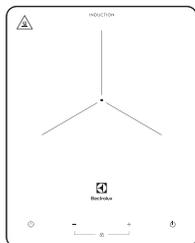

EN Tabletop induction hob  
CNT 桌上型(單口)感應爐


User Manual  
使用手冊

## Enjoy peace of mind. Register your appliance today.

Stay updated on better living services,  
safety notices and shop for accessories.

1. Open the camera app  
on your smartphone  
and point at the QR  
code to scan.

Product Registration QR code  
is located on the top surface  
or underside of your appliance.

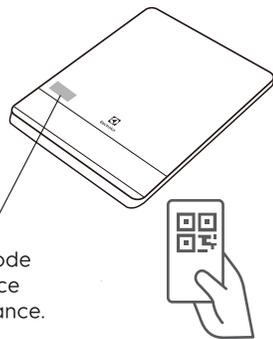

2. Tap the notification or link to open the  
registration form.

3. Complete your details and enjoy peace  
of mind.



Electrolux

## Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer quality products that make your life more comfortable. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

## CONTENTS

Description of the Appliance	2
Safety Instructions	3
Operating the Appliance	4
Tips on Cooking	5
Cleaning and Care/Disposal	6
Troubleshooting	7
Product Specification	7
Customer care center	8

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance



General information and tips




Environmental information


## DESCRIPTION OF THE APPLIANCE

## Designation of parts

ETD29PKB

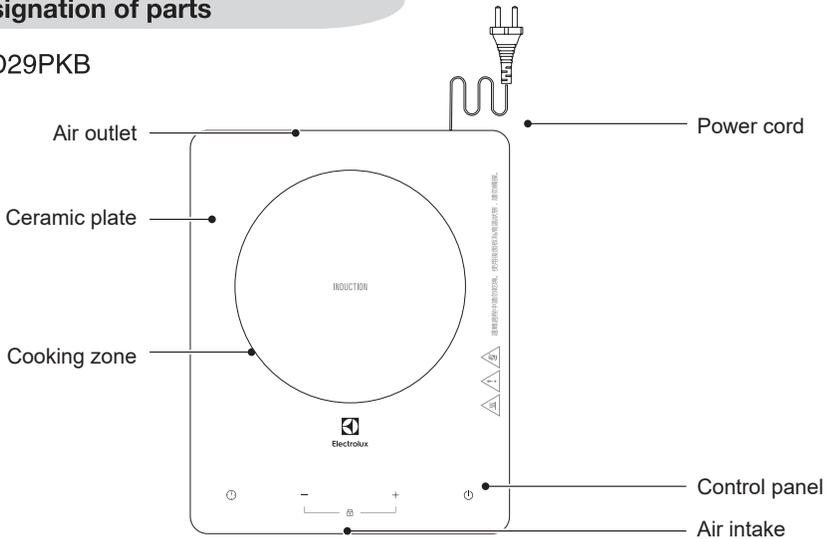

ETI29MKC

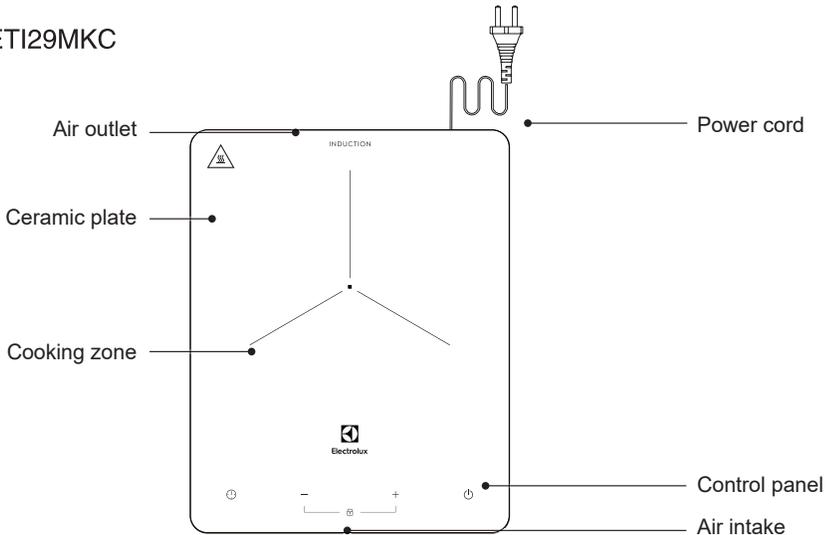**Warning**

The air inlet is located under the cooktop. Make sure it has access to fresh air and is not covered. Risk of burns from residual heat. After being turned off, the cooking zone needs some time to cool down.



This icon shows that the cooking zone is a hot surface in the state of high temperature after use. Please do not touch.

## SAFETY INSTRUCTIONS



### General information and tips

Please comply with these instructions. If you do not, any damage resulting is not covered by the warranty.

### General safety

- In the event of faults with the appliance or damage to the ceramic glass (cracks, scratches or splits), the appliance must be turned off and disconnected from the electrical supply to prevent the possibility of an electric shock.
- Repairs to the appliance must only be carried out by trained registered service engineers.
- The appliance should be placed in a well ventilated environment and at least 10cm from the wall.
- Never use the appliance when the power cable is damaged.
- The appliance should be placed on a flat surface in order to prevent the pot from slipping when placed on the cooking zone.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities; or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the mains cord is damaged, it must be replaced by the manufacturer, or a service centre authorised by manufacturer in order to avoid hazard.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.

### Child safety

- Young children must be kept away from the appliance. Only let older children work on the appliance under supervision.
- Children should be supervised to ensure that they do not play with this appliance.

### Correct use

- This appliance should be used only for normal domestic cooking.
- The appliance must not be used as a work surface or as a storage surface.
- Never use the appliance in a high humidity environment.
- Additions or modifications to the appliance are not permitted.
- Do not place or store flammable liquids, highly inflammable materials or fusible objects (e.g. plastic film, plastic, aluminium) on or near the appliance.
- Remove stickers and film from the ceramic glass before use.
- There is a risk of burns from the appliance if used carelessly.
- Cables from electrical appliances must not touch the hot surface of the appliance or hot cookware.
- Overheated fat and oil can ignite quickly. When cooking with fat or oil (e.g. frying chips) do not leave the appliance unattended.
- Turn the appliance off after each use.
- Users with implanted pacemakers should keep their upper body at least 30cm from appliance that is turned on.
- Risk of burns! Do not place objects made of metal, such as knives, forks, spoons and saucepan lids on the cooking zone, as they can get hot.
- Do not block the air inlet and outlet.
- Make sure the surface of the pot in contact with the cooking zone is clean (e.g. oil or water).
- This appliance is intended for household use or similar places such as shops, offices and pantry areas in work environment; farm houses; hotels, motels and other accommodation places for use by the guests; and breakfast areas.

### Safety when cleaning

- For cleaning, the appliance must be turned off, unplugged and cooled down.
- Make sure no water enters into the air inlet and outlet.
- For safety reasons, the cleaning of the appliance with steam jet or high pressure cleaning equipment is not permitted.

## How to avoid damage to the appliance

- The ceramic glass can be damaged by objects falling onto it.
- The edge of the ceramic glass can be damaged by being knocked by the cookware.
- Cookware made of cast iron, cast aluminium or with damaged bottoms can scratch the ceramic glass if pushed across the surface.
- Objects that melt and things that boil over can burn onto the ceramic glass and should be removed straightaway.
- Do not use the appliance with empty cookware or without cookware.
- To avoid damaging cookware and ceramic glass, do not allow saucepans or frying pans to boil dry.
- Do not use aluminum foil or other materials between the cooking surface and the cookware, unless otherwise specified by the manufacturer of this appliance.
- Use only applicable cookware and accessory types for this appliance recommended by the manufacturer.



### General information and tips

Residual heat can be used for melting and keeping food warm for a short time period. The cooking zone creates the heat required for cooking directly in the base of the cookware. The ceramic glass is merely heated by the residual heat of the cookware. The cooling fan switches itself on and off depending upon the temperature of the appliance components.

## OPERATING THE APPLIANCE

This induction cooktop is able to make many kinds of cuisine having high thermal efficiency and being safe and easy to clean.

### Putting a pot on the appliance

Put the pot with food/liquid on the cooking zone. Make sure the air inlet and air outlet are not blocked and there are no metallic objects close to the appliance.

### Turning on the appliance

Connect the power cord to a power outlet, the buzzer will sound and the power indicator will flash. When the power control is pressed, the buzzer will sound, the power indicator lights up and this indicates that the induction cooktop is in standby mode.

For model : ETD29PKB, ETI29MKC

When the appliance is in standby mode, press the “+” button or the “-” button enter the heating mode. when the buzzer sounds and digital tube displays default power, the appliance will start heating.

The default power level is 1200W, default timer is 2 hours. You can adjust the power level between 120W to 1200W by pressing the “+” or “-” button.

The timer adjusts between 1 minute to 3 hours by pressing the “⌚”, then to press the “+” or “-” for desired time.

### Setting the timer

When the appliance is heating, press the timer control to activate the timer mode. The LED will display "0:30", indicating the timer mode has been activated.

Increase (Decrease) the timer by 1 minute by pressing the "+" (" -") button once. If you hold the press of the "+" (" -") button longer, the time will increase (decrease) quickly by 10 minutes.

The range of the timer is between 1 minute to 3 hours. After you have set the desired time, which is shown in the LED display, the LED will flash for 3 seconds before the countdown will commence. Press the timer button again to cancel the timer function.

If you wish to reset the time during the countdown, first press the timer control, then press "+" (" -") button to adjust the time.

The power level can also be reset during countdown by pressing "+" (" -") button to adjust the power level.

When the time is completed, the buzzer will sound and the appliance will automatically switch off.

For security purpose, if no time applied, the appliance turns itself off after a default time of 2 hours.

## TIPS ON COOKING

### Applicable cookware and accessory material types for the tabletop induction hob

Steel, enamelled steel	Yes
Cast iron	Limited use, as it may shorten the appliance life time
Stainless steel	If appropriately labelled by the manufacturer
Aluminium, copper, brass	No
Glass, ceramic, porcelain	No

### Lock the appliance

Briefly press both "+" "-" buttons simultaneously to lock the setting of the appliance. Child lock indicator lights up.

Press and hold "+" "-" buttons for 2 seconds will de-activate the lock function. Child lock indicator lights off.

### Turning off the appliance

Press the power control button and the induction cooktop will stop heating. The fan will run for a while to cool down the induction cooktop.

### General information and tips

Cookware for induction cooktops is labelled as suitable by the manufacturer.

#### **Suitability test**

Cookware is suitable for induction cooking, if ...

- ...a small amount of water is boiling within a short time when the pot is put on the cooking zone at power 1200W.
- ... a magnet sticks to the bottom of the cookware.

If there is no any cookware or unsuitable cookware was used, the buzzer will sound for about 10 seconds and turn off.

### General information and tips

Certain cookware can make noises when being used on induction cooktops. These noises are not a fault in the appliance and do not affect operation in any way.

#### **Bottom of the cookware**

The bottom of the cookware must be as thick as possible and completely flat.

### Warning

Cookware with uneven bottom must not be used on this cooktop as it may impact the functionality and lead to glass crack.

#### **Pan size**

The cooking zone size adapts automatically to the size of the bottom of the cookware to a certain limit. The size of the cooking zone on this cooktop is 14.5-20cm.

### General information and tips

The cookware must be placed centrally on the cooking zone.

## CLEANING AND CARE

### Warning

Take care! Risk of burns from residual heat.

Sharp objects and abrasive cleaning materials will damage the appliance.

Be careful water does not enter the air inlet and outlet. Residues from cleaning agents will damage the appliance.

#### **Ceramic panel and control panel**

Slight stains: Please wipe off plate with a soft moistened cloth.

Tough stains: Please clean with a soft moistened cloth dipped in a little toothpaste or neutral liquid cleaner and swab lightly until no residue exists.

#### **Cleaning the appliance after each use**

1. Wipe the appliance with a damp close using warm water.
2. Rub the appliance dry using a clean cloth. Remove stubborn residues with a cleaner for ceramic glass.

Some scratches and dark stains on the ceramic glass may not be able to be removed. These however do not affect the functioning of the appliance.

If aluminium foil, plastic items or high sugar content liquids/foods are allowed to melt on the ceramic glass, these should be removed immediately before the surface has cooled down, otherwise pitting of the surface can occur.

NOTE: Items with high sugar content not only include jam and fruit but also vegetables such as peas, tomatoes and carrots.

### General information and tips

After the first use, some white spots may appear on the inner bottom of the pot. This is normal. Pour some vinegar into the pot, heat it to about 60-80 degrees Celsius, then wipe the spots away with a brush.

## TROUBLESHOOTING

Problem		Possible cause/action
After power is supplied, the power level display fails to light up.		<ul style="list-style-type: none"> <li>• The plug is not inserted tightly.</li> <li>• The switch, socket, fuse and power cord are not in good condition.</li> </ul>
The power level display lights up but heating does not start.		<ul style="list-style-type: none"> <li>• The pot material is not suitable.</li> <li>• For other reasons, please contact your service technician.</li> </ul>
Heating stops suddenly during operation.		<ul style="list-style-type: none"> <li>• The ambient temperature is too high.</li> <li>• The air inlet or outlet is blocked.</li> <li>• The voltage is outside the range of this appliance.</li> <li>• The timing period has reached.</li> <li>• The system protection functions and is conducting energizing test.</li> </ul>
Code of failure.	C2	Wait a few minutes for the temperature of the appliance to become normal. Press the power control button and the induction cooktop will operate as usual.
	EH, EL	Wait a few minutes. When the voltage is back to normal, the induction cooktop will operate as usual.
	E1, E2, E3 E4, E7, EU	Please contact your service technician.

## PRODUCT SPECIFICATION

Model	Applied Voltage/frequency	Rated power (w)	Appearance dimension (mm)	Weight (kg)
ETD29PKB ETI29MKC	110V 60Hz	1200	358 x 280 x 62	2.5


**Environmental Information**
**RoHS**  
**Compliant.**

If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to collecting points where available.


**This product is RoHS compliant.**

For more RoHS information, please visit:  
<https://www.electrolux.com.tw/support/rohs/#/>


## CUSTOMER CARE CENTER

<p><b>Thailand</b>  Call Center Tel : (+66 2) 725 9000  Electrolux Thailand Co.,Ltd.  Electrolux Building  14th Floor 1910 New Petchburi Road,  Bangkapi,Huay Kwang, Bangkok 10310  Office Tel : (+66 2) 259100  Office Fax : (+66 2) 259299  Email : customercarethai@electrolux.com</p>	<p><b>Malaysia</b>  Domestic Toll Free : 1300-88-11-22  Electrolux Home Appliances Sdn. Bhd.  Unit T2-7, 7th Floor, Tower 2 , Jaya33 Hyperoffice,  No. 3, Jalan Semangat, Seksyen 13,  46100 Petaling Jaya, Selangor  Office Tel : (+60 3) 7843 5999  Office Fax : (+60 3) 7955 5511  Email : malaysia.customercare@electrolux.com</p>
<p><b>Indonesia</b>  Tel : (+62 21) 522 7180  PT. Electrolux Indonesia  Gedung Plaza Kuningan  Menara Utara 2nd Floor,  Suite 201, Jl. HR Rasuna Said  kav C 11-14, Karet Setiabudi  Jakarta Selatan 12940  Office Tel: (+62 21) 522 099  Office Fax: (+62 21) 522 7097  Email : customercare@electrolux.co.id</p>	<p><b>Philippines</b>  Domestic Toll Free : 1-800-10-845-care 2273  Customer Care Hotline : (+63 2) 845 care 2273  Electrolux Philippines, Inc.  10th Floor. W5th Avenue Building  5th Avenue Corner 32nd Street  Bonifacio Global City,  Taguig Philippines 1634  Trunkline: +63 2 737- 4756  Website : www.electrolux.com.ph  Email : wecare@electrolux.com</p>
<p><b>Vietnam</b>  Domestic Toll Free : 1800-58-88-99  Tel : (+84 8) 3910 5465  Electrolux Vietnam Ltd.  Floor 9th, A&amp;B Tower  76 Le Lai street – Ben Thanh Ward – District 1  Ho Chi Minh City , Vietnam  Office Tel : (+84 8) 3910 5465  Office Fax : (+84 8) 3910 5470  Email : vncare@electrolux.com</p>	<p><b>Singapore</b>  CUSTOMER CARE HOTLINE : (+65) 6507 8699  Electrolux SEA Pte Ltd  351 Braddell Road, #01-04  Singapore 579713  Office Tel : (+65) 6507 8900  Office Fax : (+65) 6356 5489  Email : customer-care.sin@electrolux.com</p>
<p><b>Hong Kong</b>  Tel: (+852) 8203 0298  Dah Chong Hong, Ltd. – Service Centre  8/F., Yee Lim Godown Block C  2-28 Kwai Lok Street, Kwai Chung, N.T.  Hong Kong</p>	<p><b>Taiwan</b>  Free customer care hotline: 0800-888-259  (Monday to Friday 09:00 am – 12:30 pm ;  13:30 pm - 18:00 pm)  Electrolux S.E.A. Private LTD., Taiwan Branch  Customer service Email: service.tw@electrolux.com</p>

ETD29PKB

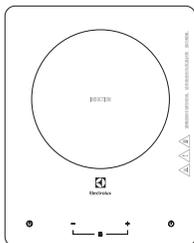

ETI29MKC

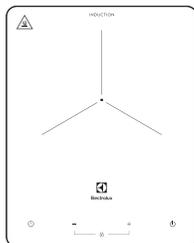

EN Tabletop induction hob  
CNT 桌上型(單口)感應爐

User Manual  
使用手冊

## 享受伊萊克斯貼心服務 立即註冊您的家電產品


註冊以獲得關於永續服務、安全提醒、  
及配件購買資訊。

1. 使用手機掃描  
家電產品上的QR code

產品註冊QR code通常位於爐面上或底部

2. 按下通知或連結以打開註冊表

3. 完成填寫所需資訊後即可享受貼心服務

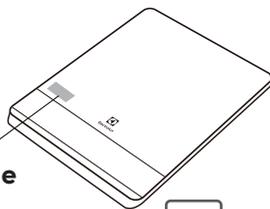

Electrolux

# 目錄

## 歡迎來到伊萊克斯的世界

感謝您選購伊萊克斯產品，希望在日後的使用中您可以享受更多生活的樂趣！伊萊克斯一直致力於提供高品質的產品，讓您的生活更加舒適美好。現在，請您花幾分鐘的時間閱讀這本使用手冊，以充分瞭解新電器的功能與好處。我們保證它將使您的生活更加省心省力。祝您使用愉快！

## 目錄

產品說明	10
安全須知	11
操作說明	12
烹飪提醒	13
清潔保養	14
疑難排解	15
技術資訊	15
客戶服務	16

### 圖示說明:



本圖示說明涉及人身安全的相關資訊，以及如何避免損壞產品的相關資訊



本圖示說明有關產品使用的提示與資訊




本圖示說明節能與環保相關的建議與資訊


# 產品說明

## 產品介紹

ETD29PKB

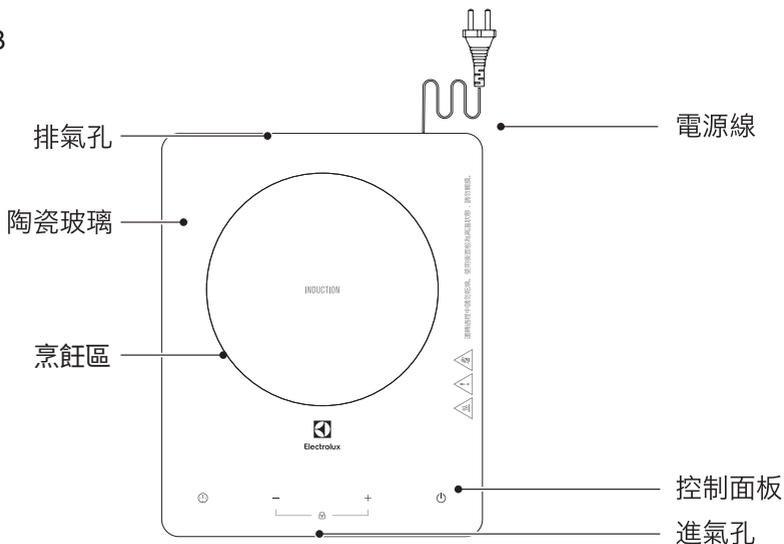

ETI29MKC

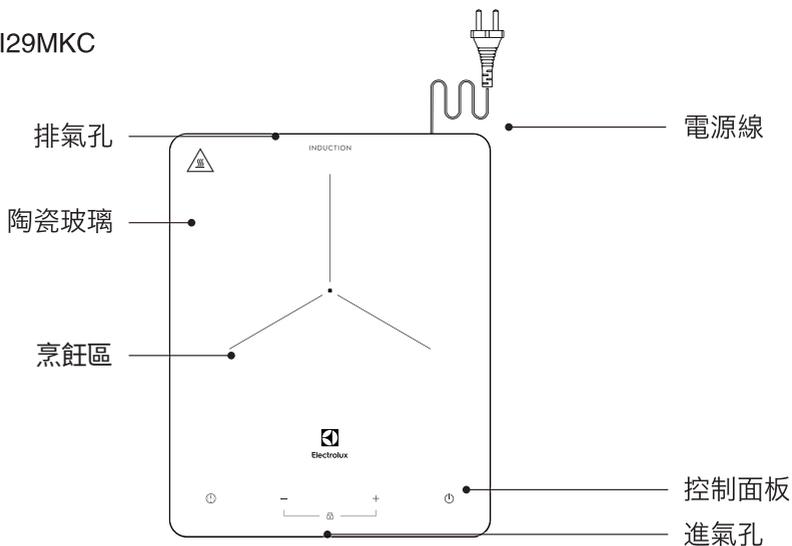

### ! 警告

進氣孔位於爐具下方。請確保新鮮空氣能夠進入，禁止堵塞。  
需防止被餘熱燙傷。爐具關閉後，烹飪區需要過一段時間才能冷卻。

爐具表面標示  代表使用後，面板加熱區為高溫熱表面，請勿觸摸。

# 安全須知

## 產品使用說明

請遵照以下說明。否則，所造成的任何損壞都將導致保固維修無效。

### 一般安全資訊

- 如果爐具發生故障或陶瓷玻璃遭到損壞（裂縫、刮痕或裂開），必須將該爐具關閉並斷開電源，以防觸電。
- 只有受過培訓的註冊服務工程師才能維修該爐具。
- 應當將該爐具置於通風良好的環境中，並且至少距離牆壁10公分。
- 電源線損壞時，禁止使用該爐具。
- 應當將該爐具放置在平整的檯面上，以防止放在烹飪區的鍋具滑落。
- 該爐具並非供身體、感知或及孩童心智能力受到限制或缺乏經驗和知識的人士使用，除非由負責他們安全的人員為其提供使用該爐具有關的監督和指導。
- 如果電源線受損，為避免危險，必須由製造商或製造商授權的服務中心進行更換。
- 該爐具並不適合與外接定時器或獨立的遙控系統配合使用。

### 兒童安全資訊

- 不要讓年幼的兒童接觸該爐具。年齡大的兒童只有在監護下才能使用該爐具。
- 應當監督兒童，確保他們不把爐具當作玩具來使用。

### 清潔時的安全事項

- 清潔時，必須將爐具關閉、斷開電源並完全冷卻。
- 切勿讓水進入進氣孔和排氣孔。
- 基於安全考量，禁止使用噴氣或高壓清潔設備來清潔該爐具。

### 正確用途

- 該爐具僅作一般家庭烹飪之用。
- 禁止將該爐具用作工作檯面或儲存檯面。
- 禁止在高濕度的環境中使用該爐具。
- 禁止對該爐具進行添加或改造。
- 禁止在該爐具之上或附近放置或存放易燃液體、高可燃性材料或可熔物體（例如塑膠薄膜、塑膠、鉛）。
- 使用前將陶瓷玻璃上的貼紙或薄膜去除。
- 使用時如果不小心，可能有燙傷風險。
- 其他電氣設備的電源線不能觸碰到該爐具的高溫表面或高溫鍋具。
- 溫度過高的油脂會被迅速點燃。在使用油脂進行烹飪時（例如炸薯片），禁止讓該爐具處於無人看管的狀態。
- 在每次使用後，都應當將爐具關閉。
- 使用心律調節器的用戶應與啟動的爐具保持至少30公分的距離。
- 小心燙傷！禁止將金屬製成的物體，例如刀、叉、湯匙、鍋蓋放在烹飪區，因為它們會受熱。
- 禁止堵住進氣孔和排氣孔。
- 確保與烹飪區接觸的鍋底是乾淨的（例如沒有油或水）。
- 該爐具僅供家庭或同類場所使用，例如商店、辦公室、工作環境中的配餐區、農舍、旅館、其他由客人使用的膳食場所或早餐區域。

## 如何避免爐具損壞

- 墜落的物體會將陶瓷玻璃砸破。
- 陶瓷玻璃的邊緣會因鍋具的碰撞遭到損壞
- 如果在爐具上推移鑄鐵、鑄鋁製成的鍋具或受損的鍋底，會將爐具的表面刮傷。
- 融化或沸騰後溢出的食物會在陶瓷玻璃上燃燒，應當立即將其清除。
- 空鍋具或無炊具時禁止使用爐具。
- 為避免損壞炊具或陶瓷玻璃，禁止讓燉鍋或煎鍋進行乾燒。
- 除非該器具的製造商另有規定，否則請勿在烹飪表面和爐具之間使用鋁箔或其他材質。
- 只使用製造商推薦適用於此感應爐的鍋具與配件類型。

型號：ETD29PKB,ETI29MKC

當爐具處於待機模式時，按“+”按鍵或“-”按鈕進入加熱模式。當蜂鳴器發出鳴響並且LED觸控面板顯示預設功率值，爐具將開始加熱。

預設功率值為1200瓦，預設時間為2小時。透過按“+”或“-”按鍵，您可以在120瓦到1200瓦之間調節功率等級。

通過按“⌚”按鍵，然後按“+”或“-”設定想要的時間，您可以將計時器設定在1分鐘到3小時之間。

## 產品使用說明

餘熱可以用來融化食物或進行短時間保溫。烹飪區能夠產生直接對鍋具底部進行加熱所需的熱量。陶瓷玻璃的溫度之所以升高，僅是由於炊具殘留的熱量。冷卻風扇可根據爐具部件的溫度自行開啟或關閉。

# 操作說明

這款桌上型感應爐能夠烹製多種美食，具有較高的熱能源效率，操作安全並且易於清潔。

## 將鍋放在爐具上

將裝有食物/液體的鍋具放在烹飪區。確保進氣孔和排氣孔未被堵塞並且爐具旁邊無金屬物體。

## 啟動爐具

將電源線插入電源插座，蜂鳴器將發出鳴響並且電源指示燈將閃爍。當按下電源控制按鍵時，蜂鳴器將發出鳴響，電源指示燈將亮起，顯示感應爐處於待機模式。

## 設置計時器

當爐具正在加熱時，按計時器控制按鈕來啟動計時器模式。LED顯示螢幕將顯示“0:30”，代表計時器模式已啟動。

按一次“+”（“-”）按鈕，可以使計時器增加（減少）一分鐘。如果您長按“+”（“-”）按鈕，時間將會以10分鐘為單位大幅度增加（減少）。

計時器的時間範圍為1分鐘到3小時。設置了所需的時間後（時間將會顯示在LED顯示螢幕上），在倒計時開始之前，LED顯示螢幕將閃爍3秒鐘。再次按計時器按鈕，可取消計時器功能。

如果您想在倒計時期間重新設置時間，首先按計時器控制按鈕，然後按“+”（“-”）按鈕來調整時間。

在倒計時期間，可以按“+”（“-”）按鈕調節功率等級，重新設定功率等級。

計時結束時，蜂鳴器將發出鳴響並且爐具將自動關閉。

基於安全考量，如果未設置時間，該爐具將在2小時的預設時間過後自動關閉。

## 烹飪提醒

### 適用於感應爐的鍋具與配件類型

鋼、搪瓷鋼	適用
鑄鐵	有限使用，因為它會縮短爐具的使用壽命
不鏽鋼	適用（若製造商正確標示材質）
鋁、銅、黃銅	不適用
玻璃、陶瓷、瓷器	不適用

## 鎖定爐具

同時輕按“+”、“-”按鈕來鎖定爐具設置。兒童鎖指示燈將亮起。按住“+”、“-”按鈕2秒鐘將解除鎖定功能。兒童鎖指示燈將熄滅。

## 關閉爐具

按電源控制按鈕，感應爐將停止加熱。風扇將繼續旋轉一段時間，以便使感應爐冷卻。

## 產品使用說明

鍋具製造商會在適用於感應爐的鍋具上標示適用標籤。

### 適用性測試

在下列情況時，鍋具適用於感應爐烹飪：

- 功率為1200W時，將鍋放在加熱區後，少量的水能夠在短時間內沸騰。
- 磁鐵吸在鍋具的底部。

如果沒有使用任何鍋具或使用了不適當的鍋具，蜂鳴器將鳴響10秒，接著感應爐將關閉。

## 一般資訊與技巧

在感應爐上使用時，有些鍋具會發出聲響。這些聲響並不是該爐具發出的，並且不會對使用帶來任何影響。

### 鍋具的底部

鍋具的底部必須平整，並且越厚越好。

## 警告

禁止在此鍋具上使用底部不平整的鍋具，因為這會影響鍋具的功能並導致玻璃破裂。

### 鍋具尺寸

雖然加熱區能夠自動適應鍋具的底部尺寸，但還是受到一定的限制。這款感應爐的加熱區尺寸為14.5-20公分。

## 一般資訊與技巧

鍋具必須被放置在加熱區的正中央。

# 清潔保養

## 警告

小心！防止被餘熱燙傷。

尖銳的物體或研磨性清潔材料會使爐具受損。注意不要讓水進入進氣孔和出氣孔。殘留的清潔劑會損壞爐具。

### 陶瓷面板和控制面板

輕微汙漬：請用濕軟布進行擦拭。

頑固汙漬：請用濕軟布沾少許牙膏或中性清洗液輕輕擦拭，直至汙漬徹底清除。

### 在每次使用後清潔爐具

1. 使用濕抹布和溫水來擦拭爐具。

2. 使用乾淨的抹布將爐具擦乾。

使用陶瓷玻璃清潔劑來去除頑固的殘留物。陶瓷玻璃上的一些劃痕和黑點可能無法被去除。然而，這些不會影響爐具的功能。

如果在陶瓷玻璃上融化鋁箔、塑膠製品或高含糖量的液體/食物，那麼應當在爐具表面冷卻之前將這些東西去除，否則會在表面留下疤痕。

注意：高含糖量的食物不僅包括果醬和水果，還包括蔬菜，例如豌豆、番茄和胡蘿蔔。

## 一般資訊與技巧

首次使用後，平底鍋的內底會出現一些白點。這是正常現象。在鍋內倒入一些醋，加熱至60-80°C，然後用刷子刷除這些白點。

# 疑難排解

問題描述		可能的原因/處理方法
接通電源後，功率等級顯示螢幕不亮。		<ul style="list-style-type: none"> <li>插頭未插緊。</li> <li>開關、插座、保險絲和電源線狀況不良。</li> </ul>
功率等級顯示螢幕亮起，但未開始加熱。		<ul style="list-style-type: none"> <li>平底鍋的材質不適當。</li> <li>若是其他原因，請聯繫服務技術人員。</li> </ul>
在運作期間突然停止加熱。		<ul style="list-style-type: none"> <li>環境溫度過高。</li> <li>進氣孔或出氣孔被堵塞。</li> <li>電壓超出該爐具的範圍。</li> <li>已達到所設定的時間。</li> <li>系統保護功能被啟動並正在執行通電測試。</li> </ul>
故障代碼	C2	等待數分鐘以便爐具的溫度恢復正常。按電源控制按鈕，感應爐將正常運作。
	EH,EL	等待數分鐘。當電壓恢復正常時，感應爐將正常運作。
	E1,E2,E3 E4,E7,EU	請聯繫服務技術人員。

# 技術資訊

型號	電壓/頻率	額定功率(瓦)	外形尺寸 (公厘)	重量 (公斤)
ETD29PKB	110 伏特	1200	358x280x62	2.5
ETI29MKC	60 赫茲			

## 環保資訊

**符合RoHS標準** 在將來的任何時候，如果您需要丟棄該產品，請勿隨家庭垃圾一起丟棄。請將該產品送至適當的回收點。

## 客戶服務

有鑒於世界各國對綠色環保意識的重視，伊萊克斯依循 RoHS「危害性限制物質指令」誠實標示產品化學物質含量，關於本產品的 RoHS 聲明書，請上伊萊克斯官網→「服務」「RoHS 聲明書」，依產品類別及型號檢索。

<https://www.electrolux.com.tw/support/rohs/#/>

# 客戶服務

<p><b>泰國</b> 呼叫中心電話: (+662) 7259000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Petchburi Road, Bangkapi, Huay Kwang, Bangkok 10310 辦公室電話: (+662) 259100 辦公室傳真: (+662) 259299 電郵: customercarethai@electrolux.com</p>	<p><b>馬來西亞</b> 國內免費電話: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Unit T 2-7, 7th floor, Tower 2, Jaya 33 Hyper office, No.3, Jalan Semangat, Seksyen 13, 46100 Petaling Jaya, Selangor 辦公室電話: (+603) 78435999 辦公室傳真: (+603) 79555511 電郵: malaysia.customercare@electrolux.com</p>
<p><b>印度尼西亞</b> 電話: (+6221) 5227180 PT. Electrolux Indonesia Gedung Plaza Kuningan Menara Utrara 2nd Floor, Suite 201, Jl. HR Rasuna Said kav C 11-14, Karet Setiabudi Jakarta Selatan 12940 辦公室電話: (+6621) 2522099 辦公室傳真: (+6621) 25227079 電郵: customercare@electrolux.com</p>	<p><b>菲律賓</b> 國內免費電話: 1-800-10-845-服務2273 客戶服務熱線: (+632) 845服務2273 Electrolux Philippines, Inc. 10th floor. W5th Avenue Building 5th Avenue Comer 32nd Street Bonifacio Global City, Taguig Philippines 1634 電話總機: +632737-4756 網站: www.electrolux.com.ph 電郵: wecare@electrolux.com</p>
<p><b>越南</b> 國內免費電話: 1800-58-88-99 電話: (+848)39105465 Electrolux Vietnam Ltd. Floor 9th, A&amp;B Tower 76 Le Lai street - Ben Thanh Ward - District 1 Ho Chi Minh City, Vietnam 辦公室電話: (+848) 39105465 辦公室傳真: (+848) 39105470 電郵: vncare@electrolux.com</p>	<p><b>新加坡</b> 客戶服務熱線: (+65) 6507 8699 Electrolux SEA Pte Ltd 351 Braddell Road, #01-04 Singapore 579713 辦公室電話: (+65) 6507 8900 辦公室傳真: (+65) 6356 5489 電郵: customer-care.sin@electrolux.com</p>
<p><b>香港</b> 電話: (+852) 82030298 大昌行有限公司 - 服務中心 香港新界葵涌葵樂街2-28號裕林工業中心C座 8樓</p>	<p><b>台灣</b> 免費客服專線:0800-888-259 (週一~週五 09:00 - 12:30 ; 13:30 - 18:00) 伊萊克斯股份有限公司台灣分公司 客服信箱: service.tw@electrolux.com</p>



