

ZH 嵌入式電冰箱
EN Fridge Freezer

使用手冊 2
User Manual 18

內容

1. 安全資訊.....	2
2. 安全說明.....	4
3. 安裝.....	5
4. 操作.....	6
5. 日常使用.....	9
6. 提示與訣竅.....	10
7. 保養與清潔.....	11
8. 疑難排解.....	13
9. 雜音.....	15
10. 規格資訊.....	16
11. 保固服務.....	16

以人為本的貼心設計

感謝您購買 Electrolux 家電用品。您所選擇的產品是伊萊克斯累積數十年專業經驗與創新技術而打造的成果。產品的功能與外型設計皆考量了您的使用方便性。因此，在您每次使用產品時，皆可以期待獲得最佳的使用體驗。歡迎來到 Electrolux。請瀏覽我們的網站，瞭解更多資訊：



獲得使用建議、使用手冊、故障解決方案、服務和維修資訊：

www.electrolux.com/support



註冊您的產品，取得更佳的服務：

www.registerelectrolux.com




購買電器的配件、耗材和原廠備用零件：

www.electrolux.com/shop


客戶關懷與服務

建議您使用原廠零配件。

與「授權服務中心」聯絡時，請確保您已備妥下列資料：型號、PNC、製造號碼。此類資訊可在機身標籤上找到。

 **警告 / 注意安全資訊**

 **一般資訊和提示**

 **環境資訊**

Electrolux 堅持永續開發策略，此說明手冊提及的產品規格、顏色、使用資訊等都可能隨時更改，恕不另行通知。

1. 安全資訊

請在安裝和使用本機之前，仔細閱讀使用手冊。任何因不當安裝和使用錯誤所造成的人身傷害或產品損壞，伊萊克斯將不負任何責任。請詳閱以下說明，並保留此說明書以備日後參考。

1.1 兒童及其他使用者安全須知

- 本電器設計不適合體格、感官或精神能力不健全，或者是缺少經驗和知識的人士（包括8歲以下兒童）使用，除非他們已透過負責他們安全的人士獲得有關使用本電器的監督或說明方可使用此機器。
- 3歲以下的兒童應遠離本機，除非有人全程監督。
- 請勿讓孩童將本機當成玩具。
- 不得由兒童在無人監督的情況下進行清潔與維護。
- 請將所有包裝放在兒童不易觸及之處，並妥善丟棄。

1.2 一般安全須知

- 本機適用於家庭及以下類似用途：
 - 農莊、商店、辦公室與其他工作環境中的員工廚房區域。
 - 飯店、汽車旅館、民宿和其他居家環境中由房客使用。
- 為避免食物受汙染，請遵循以下指示：
 - 請勿長時間開啟冰箱門；
 - 定期清潔可能與食物和排水系統接觸的表面；
 - 將生肉和魚存放於冰箱內合適的容器中，以避免與其他食品接觸或滴到其他食物上。
- 警告：請保持本機與電器櫃或嵌入式櫥櫃間的通風空間暢通無阻。
- 警告：除製造商建議的方法外，請勿使用機械裝置或其他方式來加速除霜程序。
- 警告：請勿損壞冷媒迴路。
- 警告：請勿在冰箱的食物存放隔間內部使用電器設備，除非是製造商建議可使用的的類型。
- 請勿灑水或使用蒸氣清潔本機。
- 請以柔軟的濕布清潔本機。僅限使用中性清潔劑。請勿使用具有研磨性的工具/菜瓜布/溶劑或金屬物品。

- 當本機長期處於無人使用狀態，請將其關閉、除霜、清潔、風乾並讓機門保持開啟以防止本機內部發霉。
- 請勿將具爆炸性的物品 (如噴霧氣罐) 和可燃燃料一起存放在本機中。
- 如果電源線已損壞，則必須由製造商、其維修代理商或合格的「授權服務中心」更換，以避免發生危險。

2. 安全說明

2.1 安裝



警告!

僅能由合格人員安裝本機。

- 移除所有的包裝。
- 本機若受損，請勿安裝或使用。
- 基於安全考量，在嵌入於櫥櫃之前，請勿使用本機。
- 請依循機隨附的安裝指示進行安裝。
- 移動本機時務必小心，因為電器較重。請務必使用安全手套，並穿上有包覆性的鞋子。
- 請確保空氣可在機器周圍有良好的循環。
- 初次安裝或是反轉機門後，請至少等候4小時後再將本機連接到電源供應器。如此可讓油流回壓縮機內。
- 在本機上進行任何作業之前 (例如，反轉機門)，請先從電源插座拔出插頭。
- 請勿將本機安裝在暖氣設備、炊具、烤箱或爐具附近。
- 請勿讓本機淋雨。
- 請勿將本機安裝在陽光會直接照射的位置。
- 請勿將本機安裝在太濕或太冷的區域。
- 移動本機時，請從前方將其抬起以避免刮傷地板。
- 本機內含一袋乾燥劑。這不是玩具也不是食物。請於開箱後立即丟棄。

2.2 電氣連接



警告!

可能會導致火災和觸電危險。



警告!

放置本機時，請確保電源線不會被拉扯或損壞。



警告!

請勿使用多插頭轉接插座和延長線。

- 本機必須接地。
- 請確保產品標籤上的資訊與主電源電壓及電功率額定值相容。
- 一律使用已正確安裝的防觸電插座。
- 請勿讓電子組件 (如電源插頭、電源線、壓縮機) 受損。如需更換零件，請聯絡授權服務中心或合格電工。
- 電源線的高度必須保持在電源插頭下方。
- 只有在安裝結束時才能將電源插頭接上電源插座。請確認於安裝之後，電源插頭位於伸手可及之處。
- 請勿以拉扯電源線的方式拔掉本機電源線。請一律從電源插頭處拔下。

2.3 使用方式



警告!

有受傷、燙傷、觸電或著火的危險。



本機含易燃氣體、異丁烷 (R600a) - 一種與環境高度相容的天然氣體。請勿讓含有異丁烷的冷媒迴路受損。

- 請勿變更本機的規格。
- 請勿將其他電器 (如:冰淇淋機) 放入本機，除非製造商標示此為適當做法。
- 如果冷媒迴路受損，請確保室內沒有明火和火源。室內應保持良好通風。
- 請勿讓灼熱的物品接觸本機的塑膠部件。
- 請勿將氣泡飲料放入冷凍庫，這會讓飲料罐的壓力增加。
- 請勿在本機內存放易燃的氣體和液體。
- 請勿將易燃產品或沾染可燃物質的物品放在本機內部、附近或上方。
- 請勿碰觸壓縮機或冷凝器，因這些組件非常燙。
- 如果您的雙手潮濕，則請勿從冷凍庫取出或觸碰物品。
- 請避免將已經融化的食物再次冷凍。
- 遵循冷凍食品包裝上的存放指示。

- 請先將食物存放於以食品級容器中，再將其放入冷凍庫中。

2.4 內部照明燈



警告!
可能會導致觸電風險。

- 此產品內部的照明燈和備用零件燈可承受家電中的極端物理情況 (例如溫度、振動、濕度)，或是顯示關於家電操作狀態的相關資訊。這些燈不適用於其他用途且不適合用於家庭照明。

2.5 保養與清潔



警告!
具有受傷或對器具造成損害的風險。

- 進行維修或保養前，請先關閉機器，並從電源插座將電源插頭拔下。
- 本機的冷卻系統中包含碳氫化合物。維修或填充等作業僅能由獲得授權的合格技師執行。
- 請定期檢查本機的排水管，如有必要請加以清潔。如果排水管阻塞，除霜後的水將會累積在冰箱底部。

3. 安裝



警告!
請參閱「安全」相關章節。



警告!
請參閱安裝指示以安裝本機。



警告!
請依據安裝指示固定冰箱，以避免產生不穩定的風險。

3.1 安裝位置

為確保最佳效能，安裝位置需遠離熱源，例如暖爐、爐具、陽光直射處等等。請確保空氣可在機器背部周圍自由流通。

3.2 定位

請將冰箱安裝在乾燥、通風良好的室內環境中，環境溫度應與產品標籤上指出的氣候類型相對應。

2.6 服務

- 聯絡「授權服務中心」以修復本機。請只使用原廠備用零件。
- 請注意自助修復或非專業修復可能會造成安全後果，而且可能導致保固失效。

2.7 廢棄處理



警告!
受傷或窒息的風險。

- 拔除本機的主電源線。
- 剪下電源線並加以丟棄。
- 移除機門以防止兒童和寵物被關在本機內部。
- 本機的冷媒迴路和絕緣材料不會破壞臭氧層。
- 絕緣泡沫塑料包含易燃氣體。請聯絡您的市府單位，詢問如何正確地丟棄本機。
- 請勿讓熱交換器附近之冷卻系統的部件受損。

氣候類型	環境溫度
SN-亞溫帶	+10°C 到 + 32°C
N-溫帶	+16°C 到 + 32°C
ST-亞熱帶	+16°C 到 + 38°C
T-熱帶	+16°C 到 + 43°C



如在超出環境溫度範圍的情況下進行操作，某些功能可能發生異常問題。此機器提供的功能僅可於上表列出的溫度範圍內正常運作。如果您對於安裝位置有任何疑慮，請聯繫客戶服務或授權服務中心。


3.3 電氣連接

- 連接電源線前，請確定產品標籤上顯示的電壓及頻率與當地電源供應相符。

- 本機必須接地，隨附的電源線插頭具有適用此目的的接點。如果家用電源未接地，請諮詢合格電工，並依據當地規範將此電器獨立接地。
- 若未能遵循上述安全說明，製造商概不負責。
- 本機符合當地電器測試規範。

3.4 通風需求


請依下圖於冰箱後方保留通風口，以讓空氣充分流通。

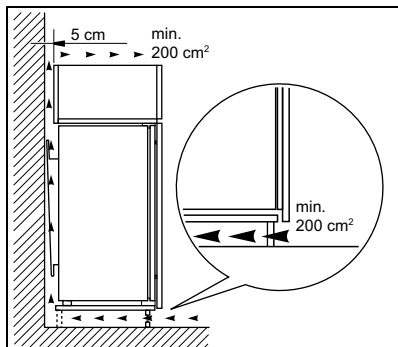

警告
請參閱安裝指示。

4. 操作

4.1 控制面板

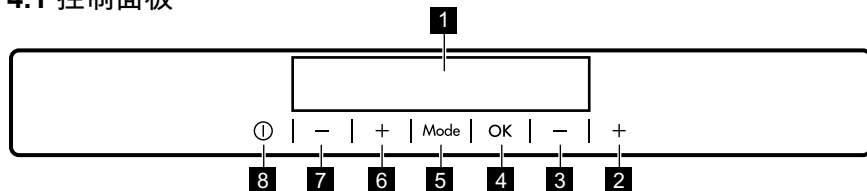


- 1** 顯示螢幕
- 2** 冷凍溫度升溫按鈕
- 3** 冷凍溫度降溫按鈕
- 4** 確認
- 5** 模式
- 6** 冷藏溫度升溫按鈕

- 7** 冷藏溫度降溫按鈕
- 8** 開/關鍵

同時按下模式(Mode)鍵與降溫按鈕數秒，可改變預設的按鍵聲響。此變更可復原。

4.2 顯示螢幕

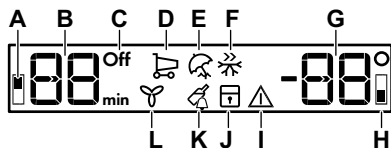

- A. 冷藏室指示燈
- B. 計時/溫度指示器
- C. ON/OFF 開啟/關閉指示燈
- D. 快速冷藏(FastCool)功能
- E. 假期(Holiday)模式
- F. 快速冷凍(FastFreeze) 功能
- G. 溫度指示器
- H. 冷凍室指示燈
- I. 警報指示器
- J. 兒童安全鎖(ChildLock)
- K. 飲品冰鎮(DrinksChill)功能
- L. 冷流循環(DYNAMICAIR) 功能

4.3 開啟電源

1. 將電源插頭連接到插座。
2. 如果顯示螢幕處於關閉狀態，請按下開/關鍵。溫度指示器會顯示預設溫度。

i 警報蜂鳴器可能會在數秒後啟動。欲重新設定警報指示器，請參閱「高溫警報」說明。

若要選擇不同的溫度，請參閱「溫度調節」說明。

如果顯示螢幕上顯示 "dEMo"，請參閱「疑難排解」章節。

4.4 關閉電源

1. 長按開/關鍵約5 秒鐘。顯示螢幕將關閉。
2. 將電源插頭從插座上拔除。

4.5 溫度調節

按下溫度調節器即可設定冰箱溫度。

預設的溫度值：

- 冷藏櫃: +5°C
- 冷凍庫: -18°C

溫度指示器會顯示已設定的溫度。

i 約24小時內可達到已設定完成的溫度。如電力中斷，先前設定好的溫度仍會繼續被保存。

4.6 啟動冷藏室

按下冷藏溫度調節器，就能啟動冷藏室。或可採用以下方法開啟：

1. 按下模式(Mode)鍵，直到出現相對應的圖示為止。

冷藏室 OFF 指示燈將閃爍。

2. 按下 OK 確認。

冷藏室 OFF 指示燈熄滅。

i 若欲選擇不同的溫度設定，請參閱「溫度調節」說明。

4.7 關閉冷藏室

1. 按下模式(Mode)鍵，直到出現相對應的圖示為止。

冷藏室 OFF 指示燈及冷藏室指示燈將閃爍。冷藏室溫度指示器將顯示為短橫線。

2. 按下 OK 確認。

冷藏室 OFF 指示燈將顯示。

4.8 快速冷藏(FastCool)功能

如欲放入大量溫熱食物(例如:到賣場購物後)，我們建議您啟動此功能以更快速地冷藏食品，並避免讓原本已存放於冰箱的其他食物升溫。

1. 按下模式(Mode)鍵，直到出現相對應的圖示為止。

快速冷藏(FastCool)指示燈將閃爍。

2. 按 OK 確認。

快速冷藏(FastCool)指示燈將顯示。大約經過 6 小時後，快速冷藏(FastCool)功能便會自動關閉。

如欲於自動停止前關閉此功能，請重複以上步驟，直到快速冷藏指示燈熄滅為止。

i 可藉由設定不同冷藏室溫度，以關閉此功能。

4.9 假期(Holiday)模式


此模式可讓您在很長一段期間保持冰箱關閉與淨空，以避免產生異味。

1. 按下模式(Mode)鍵，直到出現相對應的圖示為止。

假期模式指示燈將閃爍。溫度指示器會顯示溫度。

2. 按 OK 確認。

假期模式指示燈將顯示。

 欲關閉假期模式，可藉由選取不同溫度以關閉。

4.10 快速冷凍(FastFreeze)功能

此功能可加速冷凍新鮮食物，同時還能防止已存放的食品升溫。

1. 若要啟動此功能，按下模式(Mode)按鈕，直到出現相對應的圖示為止。


快速冷凍指示燈將閃爍。

2. 按下 OK 按鈕以確認。

快速冷凍指示燈將顯示。

此功能會在 52 小時之後自動停止。

如欲於自動停止前關閉此功能，請重複以上步驟，直到快速冷凍指示燈熄滅為止。

 可藉由設定不同冷凍室溫度，以關閉此功能。

4.11 兒童安全鎖(ChildLock)

啟動兒童安全鎖，以鎖定按鈕避免預期的操作。

1. 按下模式(Mode)鍵，直到出現相對應的圖示為止。

兒童安全鎖指示燈將閃爍。

2. 按下 OK 確認。

兒童安全鎖指示燈將出現。

若要停用兒童安全鎖，請重複以上步驟，直到兒童安全鎖指示燈熄滅為止。

4.12 飲品冰鎮(DrinksChill)功能

此功能可用以在需求時間下設定計時提醒，例如食譜要求將食材冷卻一段特定時間。

這也適用於提醒使用者飲品還放在冷凍櫃中進行快速冰鎮。

1. 按下模式(Mode)鍵，直到出現相對應的圖示為止。

飲品冰鎮指示燈將閃爍。

計時器會顯示設定的數值 (30 分鐘) 數秒鐘。

2. 按下「計時器」調節器，在 1 到 90 分鐘的範圍內變更「計時器」設定值。


3. 按下 OK 確認。

飲品冰鎮圖示將出現。

「計時」指示器將開始閃爍 (分鐘)。

在倒數計時結束時，飲品冰鎮指示燈將閃爍，警示聲也會響起。按下 OK 以關閉聲音並停止此功能。

若要關閉此功能，請重複以上步驟，直到飲品冰鎮圖示熄滅為止。


 在倒數計時期間或結束時可按下降溫按鈕與升溫按鈕來變更時間。

4.13 高溫警報

冷凍室的溫度增加(例如停電所致)時，警報圖示和冷凍室溫度將會閃爍，而且蜂鳴器會發出聲響。

按下任何一個按鈕。蜂鳴器將關閉。

冷凍室溫度指示器將顯示在幾秒鐘內所達到的最高溫度，接著會再次顯示已設定的溫度。

 警報指示燈會持續閃爍，直到恢復正常狀態。

4.14 開門警報

如果冰箱門持續開啟約 5 分鐘，冰箱的警示音會啟動且警報指示器圖示也會閃爍。


關閉冰箱門後，警示聲便會停止。發出警示聲期間，可按下任何按鈕來關閉聲音。

4.15 冷流循環(DYNAMICAIR)功能

開啟本功能的方法：

1. 按下 模式(Mode)按鈕，直到出現相對應的圖示為止。
冷流循環指示燈將閃爍。
2. 按下 OK 按鈕以確認。冷流循環圖示將顯示。

若要關閉功能，請重複以上步驟直到冷流循環圖示熄滅為止。

 如果此功能是自動啟用，將不會出現冷流循環圖示(請參閱「日常使用」章節)。
啟用冷流循環功能會增加耗電量。

5. 日常使用



警告!
請參閱「安全性」章節。

5.1 清潔內部

首次使用本機時，請使用溫水和中性肥皂清洗內部及所有內部配件，以便去除全新產品可能會有氣味，然後徹底風乾。




警告
請勿使用強效清潔劑、具研磨性的工具、含氯或油性清潔劑，因可能會破壞表面拋光。

5.2 放置冰箱門置物架

可依存放食材的包裝尺寸及大小，調整冰箱門置物架的擺放高度。

1. 慢慢將置物架往上拉，直到放開為止。
2. 然後重新擺放到您需要的位置。

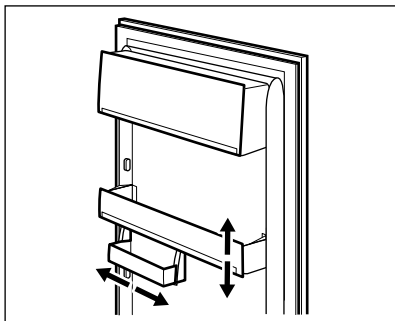

本機型配有可向側邊移動的存放盒。


5.3 活動式層架

冰箱內壁配備一系列的滑槽，可將置物架固定在所需位置。

本機也配有兩截式層架。可將層架的前半截層板收至後半截下方，以便更妥善地利用空間。

如需折疊層架：

1. 輕輕地取出前半截層架。
2. 沿著軌道將其滑至後半截層架下方。

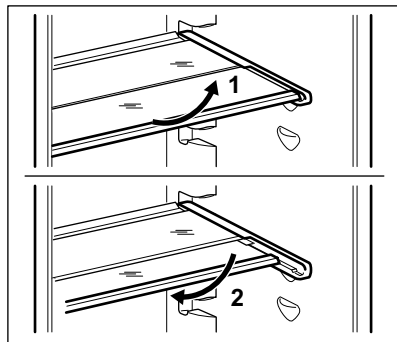

請勿將玻璃層架移到蔬果保鮮室上方，以維持良好的空氣循環。

5.4 低溫保鮮櫃


本機型的冷藏室配有低溫保鮮功能，可以妥善保鮮魚肉、肉類、海鮮等食材。

保鮮櫃位在下半部，於蔬果保鮮室的正上方。

5.5 冷流循環(DYNAMICAIR)

冰箱內配備可迅速冷卻食物溫度的裝置，並讓隔間持續保持穩定一致的溫度。

此功能會在必要時自動啟動，例如：在冰箱開啟後或周圍溫度較高時快速回復溫度。

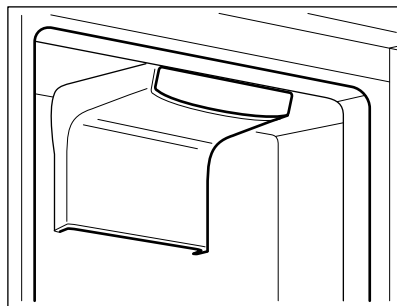

如有需要可利用手動方式啟動此功能，請參閱冷流循環(DYNAMICAIR)說明。

- i** 冷流循環功能會在打開冰箱門時停止運作，並於冰箱門關上後立即重新啟動。

5.6 活性碳空氣過濾器

冷藏室的冷流循環(DYNAMICAIR)裝置配有活性碳過濾器 (CleanAir)。

過濾器可淨化冷藏室隔間的空氣，除去異味，進一步提升存放品質。



警告

在運轉期間，請將通風抽屜保持關閉。



5.7 冷凍及存放冷凍食品

冷凍庫隔間適合冷凍新鮮食品，和長時間存放冷凍和低溫冷凍食品。

初次啟動或使用一段時間後，請先開啟快速冷凍(FastFreeze)功能並運轉至少 2 小時，再將食物放進隔間。若要冷凍新鮮食材，請於食材放入冷凍隔間前先啟動快速冷凍(FastFreeze)功能至少 24 小時。

若要冷凍新鮮食材，請將其放置在頂部隔間。

24 小時內可冷凍的食品最大量標示於產品標籤 (位於本機內部的標籤)。

冷凍程序會持續 24 小時，在此期間請勿再放入其他要冷凍的食品。

如果發生意外解凍的狀況，例如：停電，如果停電時間超過規格資訊表「上升時間」欄位所顯示的數值時，則必須儘快食用或立即烹煮解凍食品，然後再重新冷凍(經冷卻之後)。

5.8 解凍

冷凍食品於使用之前，可根據作業時間將其置於冷藏庫或室溫中進行解凍。

體積較小的食材可以直接從冷凍庫取出烹煮，即使仍在冷凍狀態。在此情況下，烹飪時間可能會比較久。

5.9 製冰

本機配置一或多個製冰盒，可製作冰塊。

- i** 請勿使用金屬器具將製冰盒從冷凍庫取出。

1. 將水倒入這些製冰盒中。
2. 將製冰盒放到冷凍庫隔間中。

5.10 積冷器

冷凍庫包含積冷器，其可在停電或冰箱故障時延長存放時間。

6. 提示與訣竅

6.1 正常運轉聲

以下聲響在運轉期間屬於正常：

- 冷媒於抽送時線圈會有微弱的流水聲或泡泡聲。
- 冷媒於抽送時壓縮機會發出旋轉與震動的聲音。
- 因為熱膨脹而從本機內部突然發出的劈啪聲 (自然而不危險的物理現象)。
- 壓縮機啟動或停止時，溫度調節器發出輕微的喀喀聲。

6.2 省電要訣

- Eco模式/預設設定可保存新鮮和冷凍食品，同時節省能源。

- 食材保鮮室 (冷藏庫)：為確保能有效地利用能源，請將冰箱底部的保鮮抽屜與內部層架均勻放置。冰箱門上的置物架位置不影響能源消耗。
- 冷凍室 (冷凍庫)：本機的內部配置可確保最有效地利用能源。
- 請勿從冷凍庫籃子取出積冷器。
- 如果周圍溫度很高、溫度設定為低溫，本機又處於滿載狀態時，壓縮機可能會持續運作，因而導致蒸發器結霜或結冰。在此情況下，請將溫度設定為較高的溫度，以自動除霜並節約能源。
- 請勿頻繁地開啟冰箱門或讓冰箱門長時間被開啟。

6.3 存放新鮮食品的要訣

- 請勿在冰箱內存放溫熱食品或蒸發中的液體
- 將食品包裝或包裹起來，特別是具有強烈氣味的食品。
- 妥善擺放食品，讓食品周圍的空氣可以自由循環

6.4 冷藏要訣

實用秘訣：

- 肉類(所有類型)：請放於適當的包裝中，並擺放於蔬果保鮮抽屜上方的玻璃層架上。肉品建議最多放置1至2天。
- 熟食、冷盤：包裝後擺放在任一層架上。
- 水果及蔬菜：徹底清潔後放入蔬果保鮮抽屜中。香蕉、馬鈴薯、洋蔥和大蒜等食材如未包裝，請避免放在冰箱中。
- 奶油及起司：放置於密閉保鮮盒中，或是以鋁箔紙、聚乙烯袋包裹，以儘量隔絕空氣。
- 瓶子：蓋上蓋子並放在冰箱門側邊的瓶架上。

6.5 冷凍要訣

- 僅冷凍品質良好、新鮮且徹底清洗乾淨的食材。

- 如希望更快冷凍與解凍，請將食物分成小份。
- 以鋁箔紙或保鮮膜包裹食物，並確保包裝是密封的。
- 若要避免已冷凍食物的升溫，請勿將新鮮未冷凍的食物直接放在已冷凍食物的旁邊。
- 脂肪含量較少的食物存放效果和期限會比含量較高的食物佳。鹽會縮短食物的存放期限。
- 從冷凍庫取出冰塊或冰棒之後，請勿立即食用，可能有凍傷風險。
- 建議您在每個包裝上標明冷凍日期，讓您清楚知道存放時間。

6.6 存放冷凍食品的要訣

- 確保零售商妥善存放市售冷凍食品；
- 確保從商店取出的冷凍食品是在最短時間內被放置到冷凍庫。
- 食品一經解凍，可能會快速腐壞且不得重新結凍。
- 請勿超過食品製造商標示的存放期限。

7. 保養與清潔



警告!
請參閱「安全性」章節。

7.1 一般警告



警告
要進行任何維修作業之前，請拔掉本機插頭。



本機在其冷卻系統中包含碳氫化合物；因此，維修及填充等作業僅能由獲得授權的合格技師執行。



本機的配件和部件不適合於洗碗機中清洗。

7.2 定期清潔



警告
請勿拉扯、移動或損壞任何在本機內部的管線及電線。



警告
請勿損壞冷卻系統。

設備必須定期清潔：


1. 使用溫水和少許中性肥皂清洗內部和所有內部配件。
2. 定期清潔機門密封圈並擦拭乾淨，確保密封圈保持乾淨且沒有碎屑。
3. 徹底清潔及風乾。
4. 如可行，請使用刷子清潔冰箱背面的冷凝器和壓縮機。
這可提升機器效能並節省用電。

7.3 冰箱除霜

在正常使用下，每次壓縮機停止時，冷藏室冷凝器上的結霜都會自動被清除。

除霜後的水會流向冰箱背後馬達壓縮機上方的容器中，並在此蒸發。

請務必定期清潔冷藏室隔間排水道中間的除霜水排水孔，以避免水滴落到食物上。

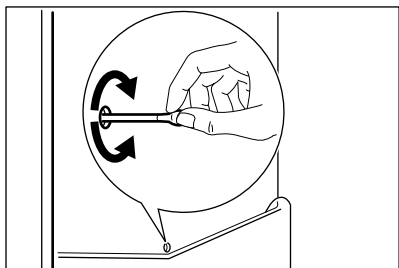

7.4 冷凍庫除霜

冷凍庫為無霜設計。即在運轉期間，不論是內壁或是食物上都不會結霜。


7.5 更換 CleanAir 空氣過濾器

空氣過濾器為活性碳過濾器，可吸附異味並可保持食物原有的最佳風味，避免串味的風險。

i 應小心維護空氣過濾器，防止其表面遭到刮傷。

i 運送時，活性碳空氣過濾器被放置於塑膠袋中以保持其效能。請在啟動本機前，請將空氣過濾器放入。

1. 打開抽屜盒。
2. 取出已耗盡的空氣過濾器。

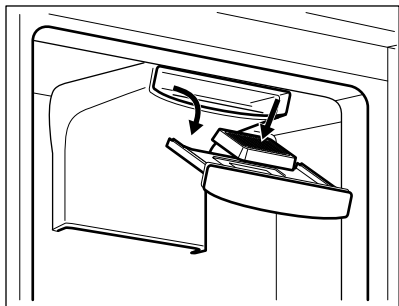

3. 將新的空氣過濾器插入。

4. 關上抽屜盒。

為了發揮最佳效能，應適當地放置空氣過濾器，且應該每年定期更換。

i 空氣過濾器屬於耗材，不列於保固範圍中。
您可以向當地經銷商購買新的空氣過濾器。若需更換空氣過濾器，請重複進行上述步驟。

7.6 無運轉期間

若長時間未使用此機器，請採取下列預防措施：

1. 中斷本機的電源供應。
2. 移走所有食品。
3. 清潔本機及所有配件。
4. 將機門保持開啟狀態以防止產生難聞的氣味。



警告

如欲將本機保持開啟狀態，請偶爾檢查一下存放狀態，以避免在停電時食品腐壞。



建議啟用假期(Holiday) 模式。

8. 疑難排解



警告!
請參閱「安全性」章節。

8.1 常見問題的處理方式

問題	可能原因	解決方法
機器無法正常運作。	機器被關閉。	開啟電源。
	電源插頭未正確連接到插座。	將插頭正確連接到電源插座。
	電源插座沒有電壓。	將其他電器連接到電源插座試，或聯絡合格的電工。
出現警示聲或可見警報。	機器於最近啟動或是溫度過高。	請參閱「高溫警報」說明。
	機器內部溫度過高。	聯絡合格的電工或客服中心。
	機門持續保持開啟狀態。	關閉機門。請參閱「開門警報」。
螢幕上顯示  或  正方形符號，而不會顯示數字。	溫度感應器出現問題。	請聯絡客服中心。 (冷卻系統會繼續將食品維持在低溫，但將無法調整溫度)。
照明燈無法正常運作。	燈具在待命狀態。	關閉及開啟機門。
	照明燈損壞。	請聯絡客服中心。
壓縮機持續運作。	溫度設定不正確。	請參閱「操作」章節。
	同一時間放置許多食品。	等候數小時，然後再次檢視溫度。
	室溫過高。	請參閱產品標籤上的氣候類型。
	放入本機的食品溫度過高。	在存放之前，讓食品冷卻到室溫。
	機門未正確關閉。	請參閱「關閉機門」。
結霜和冰塊太多。	快速冷凍(FastFreeze)功能或快速冷藏(FastCool)功能已開啟。	請參閱快速冷凍(FastFreeze)及快速冷藏(FastCool)功能說明。
	機門並未正確關閉或是密封圈變形/過髒。	請參閱「關閉機門」。
	排水管線並未正確放置。	以正確方式放置排水管線。

問題	可能原因	解決方法
	裝載太多食物，且已設定為最低溫度	設定較高溫度。請參閱「操作」章節。
	本機設定的溫度太低，而且室溫太高。	設定較高溫度。請參閱「操作」章節。
	溫度設定不正確。	請參閱「操作」章節。
按下快速冷凍(FastFreeze)、快速冷藏(FastCool)或改變溫度後，壓縮機未立刻啟動。	此為正常現象，並無任何異常狀況發生。	壓縮機在一段時間後才會啟動。
冰箱後側接盤上有積水。	在自動除霜程序期間，霜會在後側接盤融化。	此為正常現象。
水流入冰箱內部。	食物擋住水流入集水器。	請確保食物不會接觸到後側接盤。
	出水口阻塞。	請清理出水口。
水流到地板上。	融化水出口沒有正確連接到壓縮機上方的蒸發盤。	將融化水出口連接到蒸發盤。
無法設定溫度。	快速冷凍(FastFreeze)或快速冷藏(FastCool)功能已開啟。	關閉快速冷凍(FastFreeze)或快速冷藏(FastCool)功能，或等到其自動重設為止。請參閱快速冷凍(FastFreeze)或快速冷藏(FastCool)功能說明。
dEMo 出現在顯示器上。	本機已進入示範模式。	按下 OK 鍵約 10 秒鐘，直到聽見一聲長聲響且顯示器短暫關閉為止。
冰箱溫度過低/過高。	未正確設定溫度。	設定較高/較低的溫度。
	機門未正確關閉。	請參閱「關閉機門」說明。
	食品溫度過高。	放入冰箱之前，請先讓食品溫度降至室溫。
	同時存放許多食品。	存放少一點食品。
	冰箱門時常被開啟。	只有在必要時開啟冰箱門。
	快速冷凍(FastFreeze)或快速冷藏(FastCool)功能已開啟。	請參閱快速冷凍(FastFreeze)或快速冷藏(FastCool)功能說明。
	冰箱內部沒有冷空氣循環。	請確認冰箱內部是否有冷空氣循環。



如果以上問題仍無法解決，請聯絡客服中心。

8.2 更換燈具

此冰箱配有壽命較長的 LED 內部照明燈。只有授權服務人員才能更換照明裝置。請聯絡客服中心。




8.3 關閉冰箱門


1. 清潔機門密封墊圈。
 2. 如有必要，請調整機門。
- 請參閱組裝指南。

3. 如有必要，請更換損壞的機門密封墊圈。請聯絡客服中心。

9. 雜音

正常使用期間會發出某些聲響 (壓縮機、冷媒循環)。

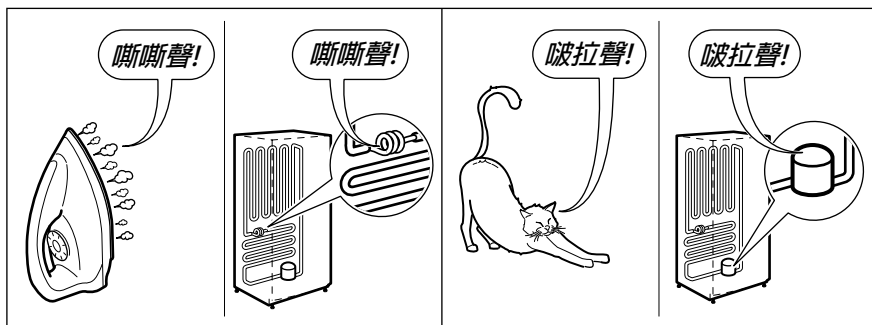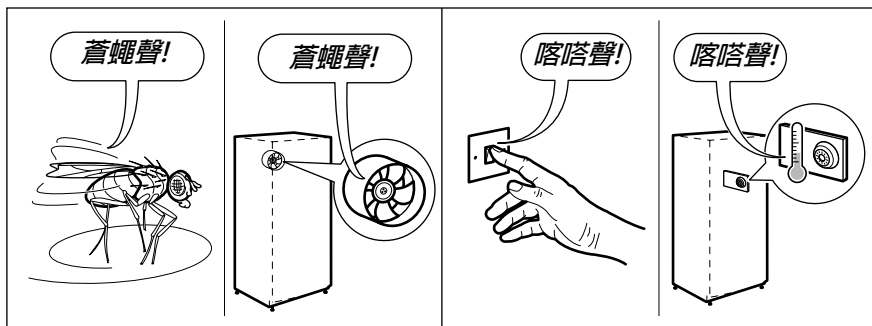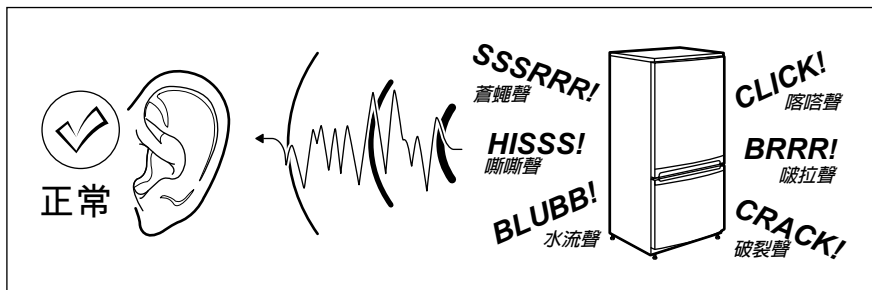

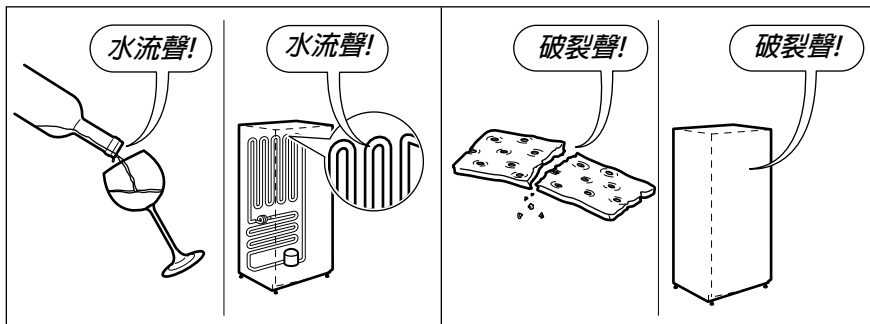

10. 規格資訊

10.1 規格資訊

壁龕尺寸	
高	1780 mm
寬	560 mm
深	550 mm

電壓	220 V
頻率	50 - 60 Hz
上升時間	23 小時

規格資訊標示於本機表面或內部的產品標籤上。

11. 台灣區服務與保固

1. 服務保證範圍：

伊萊克斯商品依據不同產品類別，在正常使用狀態下所發生之故障，提供以下保固服務：(起算日期請參考下方詳細說明)

- 大家電產品自購買日起提供二年免費保修服務。包括嵌入式(蒸)烤箱、感應爐、瓦斯爐、排油煙機、冰箱、洗碗機、洗衣機、乾衣機等。

2. 特殊保固期限：

商品使用於非家庭內使用者，依原保固期限減半。(例：營業場所、工廠、公司、學校、飯店、…等公共場所)。

3. 非保固範圍：

下列情形非屬保固範圍，檢修需酌收服務費，若需零件更換，則依循本公司服務零件檢修價目表收費。

- 非功能性組件(包括照明類組件、烤盤、蒸烤盤、烤架、洗碗籃架、爐架、爐頭、冰箱收納盒、淨水濾芯、濾網等)。
- 外觀或表面磨損。

- 經檢測後零組件未故障，而使用者要求更換。
- 使用非原廠之零件或耗材。
- 安裝或使用不當、自行拆修或經非本公司授權之服務人員檢修所引起的故障。
- 安裝位置遷移或搬運所引起的損壞或故障。

- 因天災、蟲(鼠)害、雷擊等不可抗力因素所造成之損害或故障。
- 存放環境或外力因素等造成之線路、零件氧化或故障。
- 未按規定之電壓使用者(未依照建議使用產品而造成之人身傷害或產品損壞，不在本公司的保固範圍內)。
- 非透過新加坡商伊萊克斯股份有限公司台灣分公司授權之經銷商購買的產品。


- 此產品僅限於台灣地區使用，並僅適用於台灣地區購買使用者。商品使用前請詳閱「使用說明書」並依指示操作使用及保養，避免人為操作使用不當導致商品故障。如於其他地區/國家使用而造成電器損壞，不在保固範圍之內。


- 若超過保固期限或是保固期限內需維修，請聯絡伊萊克斯客戶服務中心 0800-888-259或E-mail至客服信箱 service.tw@electrolux.com，將安排到府維修或收送等相關服務。

6. 保固起算日期將採以下任一方式認定：

- 有效保證卡之留存聯 (加蓋經銷店章及註明購買日期)。
 - 購買憑證 (發票、收據等) 正本或影本若無以上資料者，則依照產品主機上之機號，往後推算三個月做為保固起算日期。
- 新加坡商伊萊克斯股份有限公司台灣分公司保留以上保固條款修改之權益。

12. 環境關懷

回收有標誌  的材料。請將包裝材料放到適當的容器中予以回收。回收電子和電氣器具廢棄物有利於保護環境及人類健康。

請勿將有標記  的器具與家用廢棄物一同處理。請將產品送至當地回收廠或聯絡當地政府機構尋求協助。

有鑒於世界各國對綠色環保意識的重視，伊萊克斯依循RoHS「危害性限制物質指令」誠實標示產品化學物質含量，關於本產品的RoHS聲明書，請上伊萊克斯官網 -->「支援服務」-->「RoHS聲明書」，依產品類別及型號檢索。

<http://www.electrolux.com.tw/Support/Customer-Care/>

CONTENTS

1. SAFETY INFORMATION.....	18
2. SAFETY INSTRUCTIONS.....	20
3. INSTALLATION.....	22
4. OPERATION.....	23
5. DAILY USE.....	26
6. HINTS AND TIPS.....	28
7. CARE AND CLEANING.....	29
8. TROUBLESHOOTING.....	31
9. NOISES.....	34
10. TECHNICAL DATA.....	35
11. SERVICE AND GUARANTEE IN TAIWAN.....	35

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter, service and repair information:
www.electrolux.com/support



Register your product for better service:
www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE


Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information

 General information and tips

 Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result

of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 to 8 years are allowed to load and unload the appliance provided that they have been properly instructed.
- This appliance may be used by persons with very extensive and complex disabilities provided that they have been properly instructed.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.
- Keep all packaging away from children and dispose of it appropriately.

1.2 General Safety

- This appliance is intended to be used in household and similar applications such as:
 - Farm houses; staff kitchen areas in shops, offices and other working environments;
 - By clients in hotels, motels, bed and breakfast and other residential type environments.
- To avoid contamination of food respect the following instructions:
 - do not open the door for long periods;
 - clean regularly surfaces that can come in contact with food and accessible drainage systems;

- store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- When the appliance is empty for long period, switch it off, defrost, clean, dry and leave the door open to prevent mould from developing within the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Do not use the appliance before installing it in the built-in structure due to safety manner.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Make sure the air can circulate around the appliance.
- At first installation or after reversing the door wait at least 4 hours before connecting the appliance to the power supply. This is to allow the oil to flow back in the compressor.

- Before carrying out any operations on the appliance (e.g. reversing the door), remove the plug from the power socket.
- Do not install the appliance close to radiators or cookers, ovens or hobs.
- Do not expose the appliance to the rain.
- Do not install the appliance where there is direct sunlight.
- Do not install this appliance in areas that are too humid or too cold.
- When you move the appliance, lift it by the front edge to avoid scratching the floor.
- The appliance contains a bag of desiccant. This is not a toy. This is not food. Please dispose of it immediately.

2.2 Electrical connection



WARNING!

Risk of fire and electric shock.



WARNING!

When positioning the appliance, ensure the supply cord is not trapped or damaged.



WARNING!

Do not use multi-plug adapters and extension cables.

- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Make sure not to cause damage to the electrical components (e.g. mains plug, mains cable, compressor). Contact the Authorised Service Centre or an electrician to change the electrical components.
- The mains cable must stay below the level of the mains plug.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is

access to the mains plug after the installation.

- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

2.3 Use



WARNING!

Risk of injury, burns, electric shock or fire.



The appliance contains flammable gas, isobutane (R600a), a natural gas with a high level of environmental compatibility. Be careful not to cause damage to the refrigerant circuit containing isobutane.

- Do not change the specification of this appliance.
- Do not put electrical appliances (e.g. ice cream makers) in the appliance unless they are stated applicable by the manufacturer.
- If damage occurs to the refrigerant circuit, make sure that there are no flames and sources of ignition in the room. Ventilate the room.
- Do not let hot items to touch the plastic parts of the appliance.
- Do not put soft drinks in the freezer compartment. This will create pressure on the drink container.
- Do not store flammable gas and liquid in the appliance.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the compressor or the condenser. They are hot.
- Do not remove or touch items from the freezer compartment if your hands are wet or damp.
- Do not freeze again food that has been thawed.
- Follow the storage instructions on the packaging of frozen food.
- Wrap the food in any food contact material before putting it in the freezer compartment.

2.4 Internal lighting



WARNING!

Risk of electric shock.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

2.5 Care and cleaning



WARNING!

Risk of injury or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- This appliance contains hydrocarbons in the cooling unit. Only a qualified person must do the maintenance and the recharging of the unit.
- Regularly examine the drain of the appliance and if necessary, clean it. If the drain is blocked, defrosted water collects in the bottom of the appliance.

3. INSTALLATION



WARNING!

Refer to Safety chapters.



WARNING!

Refer to installation instruction document to install your appliance.



WARNING!

Fix the appliance in accordance with installation instruction document to avoid a risk of instability of the appliance.

2.6 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.

2.7 Disposal



WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door to prevent children and pets to be closed inside of the appliance.
- The refrigerant circuit and the insulation materials of this appliance are ozone-friendly.
- The insulation foam contains flammable gas. Contact your municipal authority for information on how to discard the appliance correctly.
- Do not cause damage to the part of the cooling unit that is near the heat exchanger.

3.1 Location

To ensure best performance, install the appliance well away from sources of heat such as radiators, boilers, direct sunlight etc. Make sure that air can circulate freely around the back of the cabinet.

3.2 Positioning

Install the appliance in a dry, well ventilated indoors where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C



Some functional problems might occur for some types of models when operating outside of that range. The correct operation can only be guaranteed within the specified temperature range. If you have any doubts regarding where to install the appliance, please turn to the vendor, to our customer service or to the nearest Authorised Service Centre.

3.3 Electrical connection


- Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply.
- The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the

domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.

- The manufacturer declines all responsibility if the above safety precautions are not observed.
- This appliance complies with the E.E.C. Directives.

3.4 Ventilation requirements

The airflow behind the appliance must be sufficient.

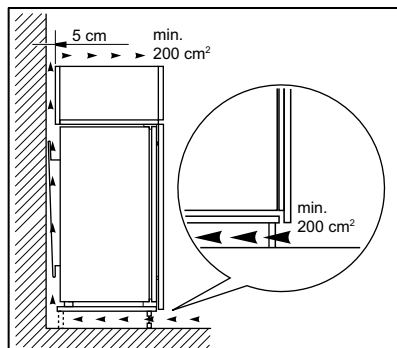


CAUTION!

Refer to the assembly instructions for the installation.

4. OPERATION

4.1 Control Panel

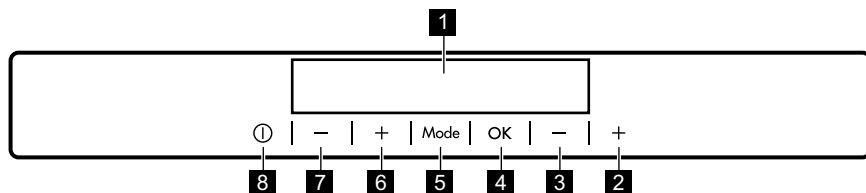


- 1** Display
- 2** Freezer Temperature warmer button
- 3** Freezer Temperature colder button
- 4** OK
- 5** Mode
- 6** Fridge Temperature warmer button

- 7** Fridge Temperature colder button
- 8** ON/OFF

It is possible to change predefined sound of buttons by pressing together Mode and temperature colder button for a few seconds. Change is reversible.

4.2 Display

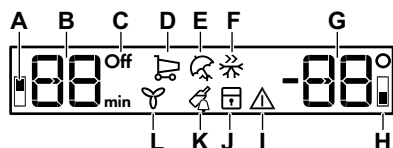

- A. Fridge compartment indicator
- B. Timer indicator /Temperature indicator
- C. ON/OFF indicator
- D. FastCool function
- E. Holiday mode
- F. FastFreeze function
- G. Temperature indicator
- H. Freezer compartment indicator
- I. Alarm indicator
- J. ChildLock function
- K. DrinksChill function
- L. DYNAMICAIR function

4.3 Switching on

1. Connect the mains plug to the power socket.
2. Press the appliance ON/OFF if the display is off. The temperature indicators show the set default temperature.



The alarm buzzer could operate after few seconds. To reset the alarm refer to "High temperature alarm".

To select a different set temperature refer to "Temperature regulation".

If "dEMo" appears on the display, refer to "Troubleshooting".

4.4 Switching off

1. Press the appliance ON/OFF for 5 seconds.
The display switches off.
2. Disconnect the mains plug from the power socket.

4.5 Temperature regulation

Set the temperature of the appliance by pressing the temperature regulators.
Default set temperature:

- +5°C for the fridge
- -18°C for the freezer

The temperature indicators show the set temperature.



The set temperature will be reached within 24 hours. After a power failure the set temperature remains stored.

4.6 Switching on the fridge

To switch on the fridge it is enough to press the fridge temperature regulator.
To switch on the fridge in the other way:

1. Press Mode until the corresponding icon appears.

The Fridge OFF indicator flashes.

2. Press OK to confirm.

The fridge OFF indicator goes off.



To select a different set temperature refer to "Temperature regulation".

4.7 Switching off the fridge

1. Press Mode until the corresponding icon appears.

The fridge OFF indicator and the fridge compartment indicator flash.

The fridge temperature indicator shows dashes.

2. Press OK to confirm.

The fridge OFF indicator is shown.

4.8 FastCool function

If you need to insert a large amount of warm food, for example after doing the grocery shopping, we suggest activating the FastCool function to chill the products more rapidly and to avoid warming the other food which is already in the refrigerator.


1. Press the Mode until the corresponding icon appears.

The FastCool indicator flashes.

2. Press the OK to confirm.

The FastCool indicator is shown.
The FastCool function shuts off automatically after approximately 6 hours.


To switch off the function before its automatic end, repeat the procedure.

-  The function switches off by selecting a different fridge set temperature.

4.9 Holiday mode

This mode allows you to keep the appliance closed and empty during a long holiday period without the formation of bad odours.

1. Press the Mode until the corresponding icon appears.
The Holiday indicator flashes. The temperature indicator shows the set temperature.
2. Press the OK to confirm.
The Holiday indicator is shown.


-  This mode switches off after selecting a different temperature.

4.10 FastFreeze function

The FastFreeze function accelerates the freezing of fresh food and, at the same time, protects foodstuffs already stored from undesirable warming.

1. To activate this function press the Mode button until the corresponding icon appears.
The FastFreeze indicator flashes.
2. Press the OK button to confirm.
The FastFreeze indicator is shown.
This function stops automatically after 52 hours.

To switch off the function before its automatic end repeat the procedure until the FastFreeze indicator turns off.

-  The function switches off by selecting a different set temperature.

4.11 ChildLock function

Activate the ChildLock function to lock the buttons from unintentional operation.

1. Press Mode until the corresponding icon appears.
The ChildLock indicator flashes.
2. Press OK to confirm.
The ChildLock indicator is shown.
To deactivate the ChildLock function, repeat the procedure until the ChildLock indicator goes off.


4.12 DrinksChill function

The DrinksChill function is to be used to set an acoustic alarm at the preferred time, useful for example when a recipe requires to cool down food products for a certain period of time.

It is also useful when a reminder is needed in order not to forget the bottles placed in the freezer for fast cooling.

1. Press Mode until the corresponding icon appears.
The DrinksChill indicator flashes.
The Timer shows the set value (30 minutes) for a few seconds.
2. Press the Timer regulator to change the Timer set value from 1 to 90 minutes.
3. Press OK to confirm.
TheDrinksChill indicator is shown.
The Timer start to flash (min).
At the end of the countdown the DrinksChill indicator flashes and an audible alarm sounds. Press OK to switch off the sound and terminate the function.

To switch off the function repeat the procedure until the DrinksChill goes off.

-  It is possible to change the time at any time during the countdown and at the end by pressing the Temperature colder button and the Temperature warmer button.

4.13 High temperature alarm

An increase in the temperature in the freezer compartment (for example due to an earlier power failure) is indicated by flashing the alarm icon and freezer temperature indicators, and sounding of buzzer.

Press any button.

The buzzer switches off.
The freezer temperature indicator shows the highest temperature reached for a few seconds, then displays the set temperature again.



The alarm indicator continues to flash until the normal conditions are restored.

4.14 Door open alarm

If the refrigerator door is left open for approximately 5 minutes, the sound is on and alarm indicator flashes.

The alarm stops after closing the door. During the alarm, the sound can be muted by pressing any button.

4.15 DYNAMICAIR function

To switch on the function:

1. Press the Mode button until the corresponding icon appears. The DYNAMICAIR indicator flashes.
2. Press the OK button to confirm. The DYNAMICAIR indicator is shown.

To switch off the function repeat the procedure until the DYNAMICAIR indicator icon goes off.



If the function is activated automatically the DYNAMICAIR indicator is not shown (refer to "Daily use").
The activation of the DYNAMICAIR function increase the energy consumption.

5. DAILY USE



WARNING!
Refer to Safety chapters.

5.1 Cleaning the interior

Before using the appliance for the first time, the interior and all internal accessories should be washed with lukewarm water and some neutral soap to remove the typical smell of a brand-new product, then dried thoroughly.




CAUTION!
Do not use detergents, abrasive powders, chlorine or oil-based cleaners as they will damage the finish.

5.2 Positioning the door shelves

To permit storage of food packages of various sizes, the door shelves can be placed at different heights.

1. Gradually pull the shelf up until it comes free.
2. Reposition as required.

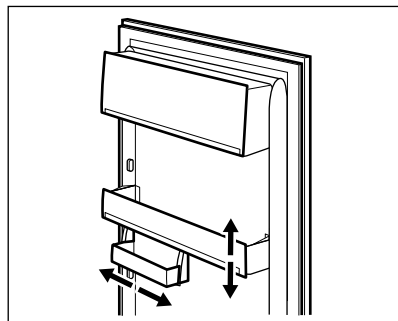

This model is equipped with a variable storage box which can be moved sideways.

5.3 Movable shelves


The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

This appliance is also equipped with a shelf consisting of two parts. The front half of the shelf can be placed under the second half to make better use of space.

To fold the shelf:

1. Take out the front half gently.

2. Slide it into the lower rail and under the second half.

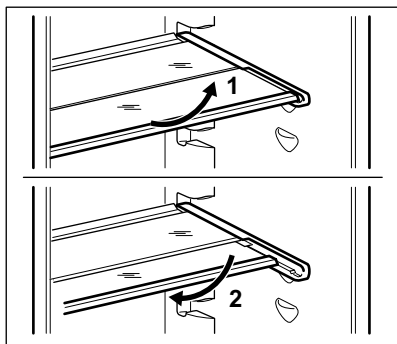

- i** Do not move the glass shelf above the vegetable drawer to ensure correct air circulation.

5.4 Low Temperature compartment


In models equipped with this feature in the fridge part, it is intended for a best conservation of fresh foods like fish, meat, seafood, etc.

It is located in the lower part, directly above of the vegetable conservation drawer.

5.5 DYNAMICAIR

The refrigerator compartment is equipped with a device that allows rapid cooling of food and keeps a more uniform temperature in the compartment.

This device activates automatically when needed, for example for a quick temperature recovery after door opening or when the ambient temperature is high.

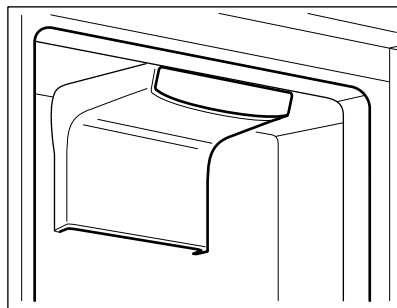

- i** It is possible to switch on the device manually when needed (refer to "DYNAMICAIR function").
- i** The DYNAMICAIR device stops when the door is open and restarts immediately after the door closing.

5.6 Carbon Air Filter

Your appliance is equipped with a carbon filter CleanAir in a drawer in the DYNAMICAIR device.

The filter purifies the air from unwanted odours in the fridge compartment meaning that the storage quality will be further improved.



CAUTION!

During the operation, always keep the air ventilation drawer closed.



5.7 Freezing and storage of frozen food

The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.

When first starting-up or after a period out of use, before putting the products in the compartment let the appliance run at

least 2 hours with the FastFreeze function turned on. To freeze fresh food activate the FastFreeze function at least 24 hours before placing the food to be frozen in the freezer compartment.

To freeze fresh food place it in the top compartment.

The maximum amount of food that can be frozen in 24 hours is specified on the **rating plate**, a label located on the inside of the appliance.

The freezing process lasts 24 hours, during this period do not add other food to be frozen.

In the event of accidental defrosting, for example due to a power failure, if the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooling).

5.8 Thawing

Deep-frozen or frozen food, prior to being used, can be thawed in the

refrigerator compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer: in this case, cooking will take longer.

5.9 Ice-cube production

This appliance is equipped with one or more trays for the production of ice-cubes.



Do not use metallic instruments to remove the trays from the freezer.

1. Fill these trays with water
2. Put the ice trays in the freezer compartment.

5.10 Cold accumulators

The freezer contains at least one cold accumulator which increases storage time in the event of a power cut or breakdown.

6. HINTS AND TIPS

6.1 Normal operating sounds

The following sounds are normal during operation:

- A faint gurgling and bubbling sound from coils sound when refrigerant is pumped.
- A whirring and pulsating sound from the compressor when refrigerant is pumped.
- A sudden cracking noise from inside appliance caused by thermic dilatation (a natural and not dangerous physical phenomenon).
- A faint click noise from the temperature regulator when the compressor switches on or off.

6.2 Hints for energy saving

- Eco mode / default setting preserves fresh and frozen foods while saving energy.

- Fresh Food Compartment (Fridge): Most efficient use of energy is ensured in the configuration with the drawers in the bottom part of the appliance and shelves evenly distributed. Position of the door bins does not affect energy consumption.
- Frozen Compartment (Freezer): The internal configuration of the appliance is the one that ensures the most efficient use of energy.
- Do not remove the cold accumulators from the freezer basket.
- If the ambient temperature is high and the temperature control is set to low temperature and the appliance is fully loaded, the compressor may run continuously, causing frost or ice formation on the evaporator. In this case, set the temperature control toward higher temperature to allow automatic defrosting and to save energy this way.

- Do not open the door frequently or leave it open longer than absolutely necessary.

6.3 Hints for fresh food refrigeration

- Do not store warm food or evaporating liquids in the refrigerator.
- Cover or wrap the food, particularly if it has a strong flavour.
- Position food so that air can circulate freely around it.

6.4 Hints for refrigeration

Useful hints:

- Meat (all types): wrap in a suitable packaging and place it on the glass shelf above the vegetable drawer. Store meat for at most 1-2 days.
- Cooked foods, cold dishes: cover and place on any shelf.
- Fruit and vegetables: clean thoroughly and place in a special drawer. Bananas, potatoes, onions and garlic must not be kept in the refrigerator if not packed.
- Butter and cheese: place in a special airtight container or wrap in an aluminium foil or a polythene bag to exclude as much air as possible.
- Bottles: close with a cap and place on the door bottle shelf, or (if available) on the bottle rack.

6.5 Hints for freezing

- Freeze only top quality, fresh and thoroughly cleaned food products.

- For more efficient freezing and thawing divide food into small portions.
- Wrap the food in aluminium foil or polythene. Make sure that the packages are airtight.
- To avoid increase in temperature of already frozen food, do not place fresh unfrozen food directly next to it.
- Lean foods store better and longer than fatty ones. Salt reduces the storage life of food.
- Do not eat ice cubes, water ices or ice lollies immediately after taking them out of the freezer. Risk of frostbites.
- It is advisable to show the freezing date on each individual pack to enable you to keep tab of the storage time.

6.6 Hints for storage of frozen food

- Make sure that the commercially frozen food products were adequately stored by the retailer.
- Make sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time.
- Once defrosted, food deteriorates rapidly and cannot be refrozen.
- Do not exceed the storage period indicated by the food manufacturer.

7. CARE AND CLEANING



WARNING!

Refer to Safety chapters.

7.1 General warnings



CAUTION!

Unplug the appliance before carrying out any maintenance operation.



This appliance contains hydrocarbons in its cooling unit; maintenance and recharging must therefore only be carried out by authorized technicians.



The accessories and parts of the appliance are not suitable for washing in a dishwasher.

7.2 Periodic cleaning



CAUTION!

Do not pull, move or damage any pipes and/or cables inside the appliance.



CAUTION!

Do not damage the cooling system.


The equipment has to be cleaned regularly:

1. Clean the inside and accessories with lukewarm water and some neutral soap.
2. Regularly check the door seals and wipe them clean to ensure they are clean and free from debris.
3. Rinse and dry thoroughly.
4. If accessible, clean the condenser and the compressor at the back of the appliance with a brush.
This will improve the performance of the appliance and save electricity consumption.

7.3 Defrosting of the refrigerator

Frost is automatically eliminated from the evaporator of the refrigerator compartment every time the motor compressor stops, during normal use. The defrost water drains out through a trough into a special container at the back of the appliance, over the motor compressor, where it evaporates.

It is important to periodically clean the defrost water drain hole in the middle of the refrigerator compartment channel to prevent the water overflowing and dripping onto the food inside.

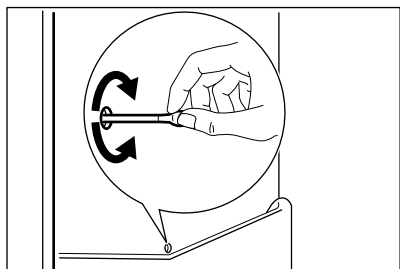

7.4 Defrosting of the freezer

The freezer compartment is frost free. This means that there is no build up of frost when it is in operation, neither on the internal walls, nor on the foods.

7.5 Replacing the CleanAir filter

The carbon air filter is an active carbon filter which absorbs bad odors and permits to maintain the best flavour and aroma for all foodstuffs without risk of odor cross contamination.




The air filter should be handled carefully to prevent its surface from being scratched.



On delivery, the carbon filter is in a plastic bag to preserve performance. Place the filter in the slot before activating the appliance.

1. Open the drawer.
2. Pull out the exhausted air filter.

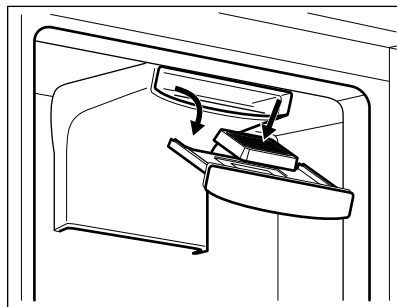

3. Insert the new air filter in the slot.
 4. Close the drawer.
- To get the best performance the drawer should be placed properly and the CleanAir filter should be changed once every year.



The air filter is a consumable accessory and as such is not covered by the guarantee. New active air filters can be purchased from your local dealer. To change the air filter repeat the procedure.

7.6 Periods of non-operation

When the appliance is not in use for long periods, take the following precautions:

1. Disconnect the appliance from electricity supply.
2. Remove all food.
3. Clean the appliance and all accessories.
4. Leave the door/doors open to prevent unpleasant smells.



CAUTION!

If you want to keep the appliance switched on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure. We recommend activating Holiday Mode.



8. TROUBLESHOOTING



WARNING!

Refer to Safety chapters.

8.1 What to do if...

Problem	Possible cause	Solution
The appliance does not operate.	The appliance is switched off.	Switch on the appliance.
	The mains plug is not connected to the mains socket correctly.	Connect the mains plug to the mains socket correctly.
	There is no voltage in the mains socket.	Connect a different electrical appliance to the mains socket. Contact a qualified electrician.
Audible or visual alarm is on.	The cabinet has been recently switched on or the temperature is too high.	Refer to "High temperature alarm".
	The temperature in the appliance is too high.	Contact a qualified electrician or contact the nearest Authorised Service Centre.
	The door is left open.	Close the door. Refer to "Door open alarm"
A  or  symbol is shown instead of numbers on the Temperature Display.	Temperature sensor problem.	Contact the nearest Authorised Service Centre (the cooling system will continue to keep food products cold, but temperature adjustment will not be possible).
The lamp does not work.	The lamp is in stand-by.	Close and open the door.
	The lamp is defective.	Contact the nearest Authorised Service Centre.
The compressor operates continually.	Temperature is set incorrectly.	Refer to "Operation".

Problem	Possible cause	Solution
	Many food products were put in at the same time.	Wait few hours and then check the temperature again.
	The room temperature is too high.	Refer to climate class chart on the rating plate.
	Food products placed in the appliance were too warm.	Allow food products to cool to room temperature before storing.
	The door is not closed correctly.	Refer to "Closing the door".
	The "FastFreeze function" or "FastCool function" is switched on.	Refer to "FastFreeze function" or "FastCool function".
There is too much frost and ice.	The door is not closed correctly or the gasket is deformed/dirty.	Refer to "Closing the door".
	The water drainage plug is not correctly positioned.	Position the water drainage plug in the correct way.
	Appliance is fully loaded and it is set to the lowest temperature	Set a higher temperature. Refer to "Operation".
	Temperature set in the appliance is too low and the ambient temperature is too high.	Set a higher temperature. Refer to "Operation".
	Temperature is set incorrectly.	Refer to "Operation".
The compressor does not start immediately after pressing the "FastFreeze" or "FastCool", or after changing the temperature.	This is normal, no error has occurred.	The compressor starts after a period of time.
Water flows on the rear plate of the refrigerator.	During the automatic defrosting process, frost melts on the rear plate.	This is correct.
Water flows inside the refrigerator.	Food products prevent the water to flow into the water collector.	Make sure that food products do not touch the rear plate.
	The water outlet is clogged.	Clean the water outlet.

Problem	Possible cause	Solution
Water flows on the floor.	The melting water outlet is not connected to the evaporative tray above the compressor.	Attach the melting water outlet to the evaporative tray.
Temperature cannot be set.	The "FastFreeze function" or "FastCool function" is switched on.	Switch off "FastFreeze function" or "FastCool function" manually, or wait until the function resets automatically to set the temperature. Refer to "FastFreeze function" or "FastCool function".
dEMo appears on the display.	The appliance is in demonstration mode.	Keep the OK pressed for approximately 10 seconds until a long sound is heard and display shuts off for a short time.
The temperature in the appliance is too low/too high.	The temperature regulator is not set correctly.	Set a higher/lower temperature.
	The door is not closed correctly.	Refer to "Closing the door".
	The food products' temperature is too high.	Let the food products temperature decrease to room temperature before storage.
	Many food products are stored at the same time.	Add less food products at the same time.
	The door has been opened often.	Open the door only if necessary.
	The "FastFreeze function" or "FastCool function" is switched on.	Refer to "FastFreeze function" or "FastCool function".
	There is no cold air circulation in the appliance.	Make sure that there is cold air circulation in the appliance.



If the advice does not lead to the desired result, contact the nearest Authorised Service Centre.

8.2 Replacing the lamp

The appliance is equipped with a longlife LED interior light.




Only service is allowed to replace the lighting device. Contact your Authorised Service Centre.


8.3 Closing the door

1. Clean the door gaskets.
2. If necessary, adjust the door. Refer to assembly instructions.
3. If necessary, replace the defective door gaskets. Contact the Authorised Service Centre.

9. NOISES

There are some sounds during normal running (compressor, refrigerant circulation).

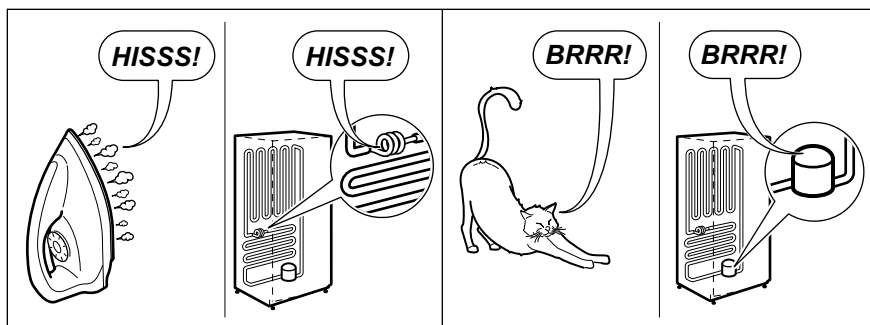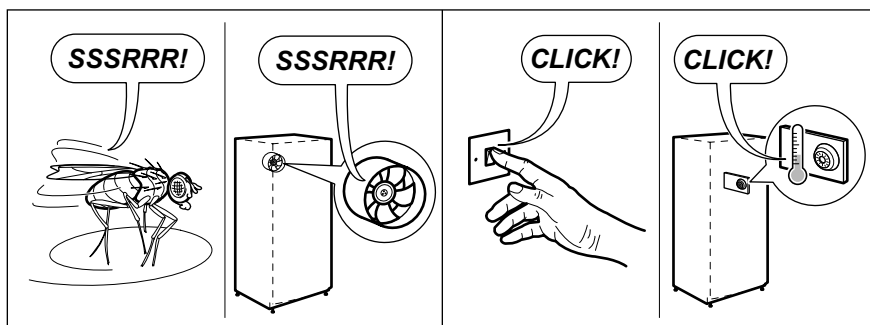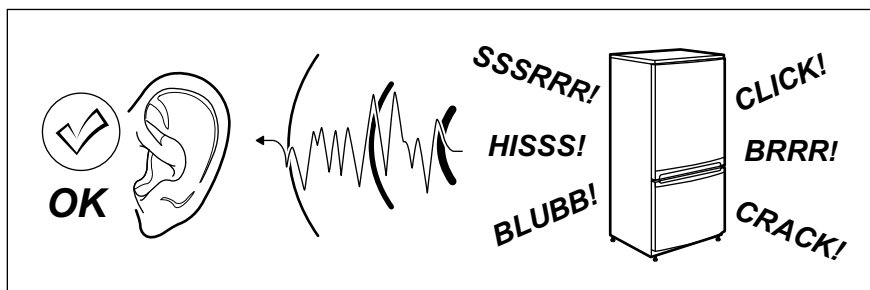

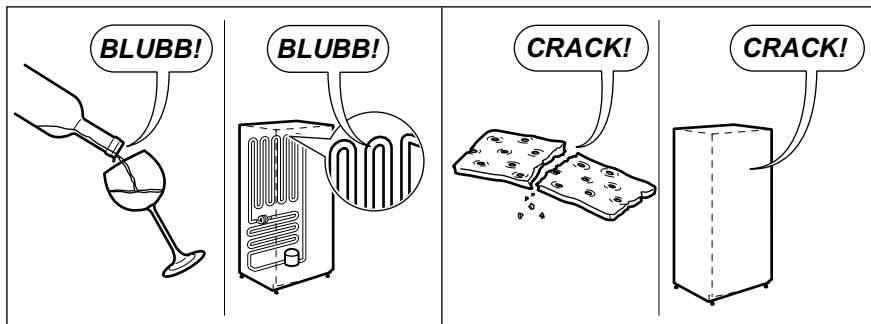

10. TECHNICAL DATA

10.1 Technical data

Dimensions of the recess	
Height	1780 mm
Width	560 mm
Depth	550 mm

Voltage	220 V
Frequency	50 - 60 Hz
Rising time	23 h

The technical information is situated in the rating plate, on the external or internal side of the appliance and on the energy label.

11. SERVICE AND GUARANTEE IN TAIWAN

The appliance is guaranteed by Electrolux, the major kitchen appliance in Taiwan. Electrolux guarantees to the end user 2 year free warranty services, subject to the terms and conditions listed below:

1. Service and warranty are only applied to Electrolux Inspiration major kitchen appliances sold in Taiwan.
2. Electrolux provides free maintenance service for 2 year commencing from the date of appliance purchase. End users that register their products online or through mailing back the warranty cards after purchasing.
3. Free maintenance service is valid for the functional components, including PCBs, pumps, motors, heating system...etc.
4. Within the period of warranty, Electrolux shall provide free maintenance service to end users. After the expiration date of warranty, end users will have to afford the fee of repairing and parts. If services

occur, the replaced parts belong to Electrolux.

5. Warranty is invalid in the below cases:
 - The warranty has expired.
 - Damages or malfunctions caused by force majeure, including natural calamities, thunder, accidents... etc.
 - Damages or malfunctions caused by misusing, negligence, improper installation, modification and disassembly, and transportation.
 - Using unauthorized parts.
 - Repaired by other parties.
 - Products used under commercial circumstances, including restaurants, cooking classrooms, baking shops...etc.
 - Not the products imported by Electrolux.


The execution shall obey the latest announced clauses.
6. To ensure your right of warranty, please register the products while purchasing. Ask the retailer to fill up

related info for you on the warranty cards and mail them back to Electrolux or simply register online. Please keep your invoices for data checking.

Service Info

1. Telephone: 0800-888259
2. E-mail: service.tw@electrolux.com
3. Service personnel of Electrolux will be wearing uniform and service ID card for distinguishing.
4. Within the period of warranty, services are free of charge.
5. When the warranty expired and end users choose not to repair the appliance after inspection, Electrolux will have to charge inspection fee each time.
6. When the warranty expired and end users choose to repair the appliance after inspection, Electrolux will have to charge the fee of the parts required. Inspection fee will be free of charge.
7. Prices of parts differ from component to component; Electrolux will have to confirm it after inspection according to the latest quotation.

12. ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it.
Help protect the environment and human health and to recycle waste of electrical

and electronic appliances. Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



222378794-B-042022