 


EOT40DBD

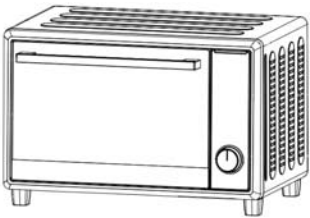

EN OVEN  
CNT 電烤箱

INSTRUCTION BOOK  
使用手冊



Electrolux



# 使用手冊-電烤箱

## INSTRUCTION BOOK-OVEN



Model No. EOT40DBD

使用電器前請先詳閱此使用手冊，並妥善保管以備日後參考。  
Please read the manual carefully before use.  
Keep them for further reference.

僅適用一般家庭需求  
HOUSEHOLD USE ONLY

# IMPORTANT SAFETY INSTRUCTIONS

When using electric appliances, basic safety precautions should always be followed, including the following :

- Read all instructions before using the appliance and keep for future reference.
- Do not touch hot surfaces.
- Close supervision is necessary when the appliance is used by or near children.
- To protect against electric shock, do not place any parts of the electric oven in water or other liquid.
- Do not let cord cross over the edge of the table, or touch hot surfaces.
- Do not operate the appliance with damaged cord or plug. After the appliance malfunctions, or has been damaged in any manners, return the appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
- The use of accessories not recommended by the appliance manufacturer may cause hazard or injury.
- Unplug from outlet when not in use, or before cleaning. Let it cool before putting on or taking parts before cleaning.
- Do not clean with metal scouring pads. They will damage the surface and may cause electric shock by touching electric parts.
- Oversized foods or metal utensils must not be inserted in the electric oven as they may create a risk of electric shock.
- Extreme caution should be exercised when using containers constructed out of anything other than metal or glass.
- Do not place any of the following materials in the oven : cardboard, plastic, paper, or anything similar.
- Do not store any materials other than the manufacturer's recommended accessories, in this oven when not in use.
- Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
- This appliance should not work through outside timer or remote control.
- This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, contact our customer care hotline before using the oven.
- Do not use outdoors.
- Do not use the appliance for other than intended use.
- This appliance is for HOUSEHOLD USE ONLY.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

 
# IMPORTANT SAFETY INSTRUCTIONS

- The weight of the food which on the Food Tray/Grill Rack should not be over 3.5kg.
- Do not put food on one side of the food tray or grill rack. Food to be placed evenly on the tray or rack.



## CAUTION

- If the oven is positioned too close to the wall, the wall will be burned or stained. Be sure the curtain is not in contact with the oven body.
- Do not put anything between the bottom of the body and the counter surface on which it is set; such object could be burnt.
- When operating the oven, keep at least 10cm of space on all sides of the oven to allow adequate air circulation. It's recommended to have at least 30cm space between the top of oven and bottom of cabinet.

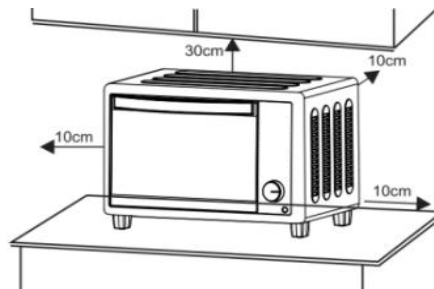


- The rear surface of appliances should be placed against the wall.
- Do not cover any parts of the oven with metal foil. This may cause overheating of the oven.
- Do not put anything on the oven while using it. The heat could cause deformation, crack, etc.
- Do not store any flammable material on the oven during operation, it can cause fire.
- Do not rest cooking utensils or baking dishes on the glass door, it could cause unit to fall down.






## CAUTION

 - The temperature of the door or the outer surface may be higher when the appliance is operating. Temperature of accessible surfaces may be high when the appliance is operating.
- The metal parts and glass window of the door become extremely hot during use ; be careful not to touch them when opening and closing the door.

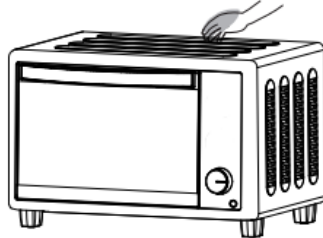

 - AC power must be taken from a properly-wired outlet. Insert the plug completely into the socket ; if it is not, it will become abnormally hot.
- Do not use an electric light outlet. Never connect multiple plugs to the same outlet.

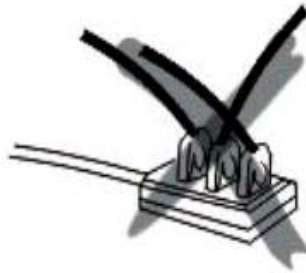


APPLIANCE SURFACES ARE HOT AFTER USE. ALWAYS wear protective, insulated oven gloves when touching hot oven or hot dishes and food, or when inserting or removing rack, pans or baking dishes.

Always use the Food Tray holder when inserting or removing the tray

Touching these will cause severe burns.



 When the oven is hot, do not apply water to the glass window, It may cause the glass to break.

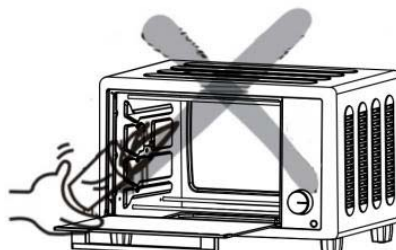

When unplugging the cord, always take hold of the plug itself. Never pull on the cord : doing so could break the wires inside the cord.




## CAUTION

 
- When using the oven, do not place the unit close to the gas burner or other source of high temperature or direct the electric fan at the oven as it could prevent the oven to get the correct temperature control.
- Do not the power cord nor handle the unit with wet hands. Always unplug the cord after use. Any malfunctioned unit with plug inserted into the outlet could cause fire hazard.



- When cooking oil-splashing dishes such as roast chicken, it is recommended to put 2 sheets of aluminum foils on a tray in order to diminish oil splashing.

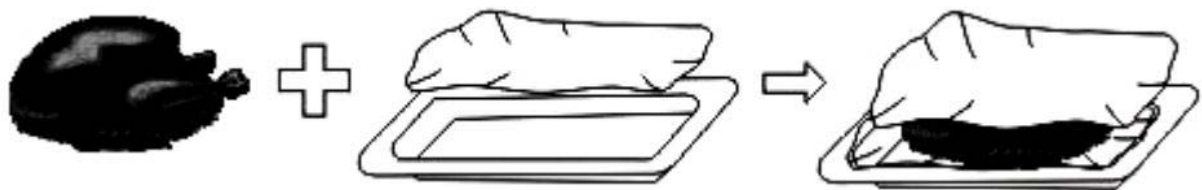

## COMPONENTS:

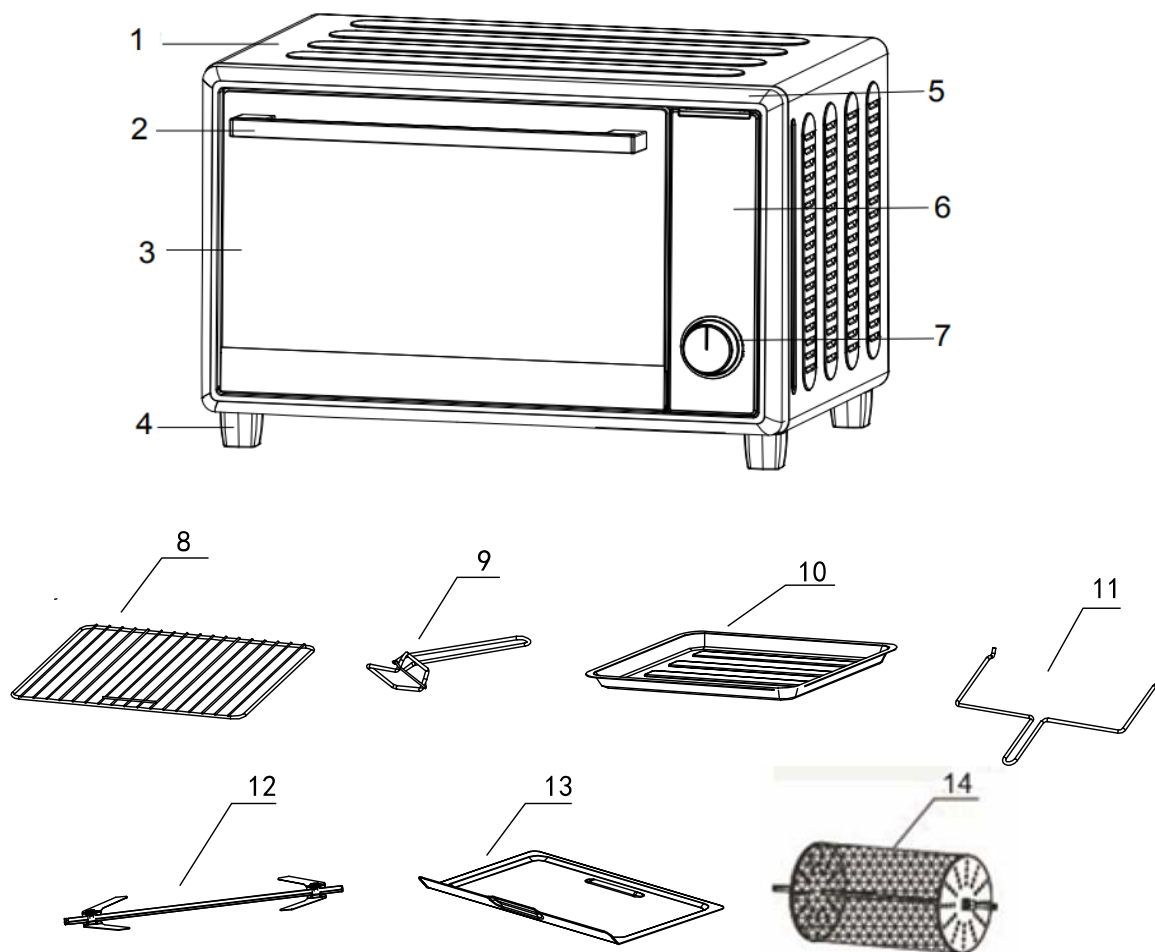 

1. Housing

2. Door handle

3. Door glass

4. Oven feet

5. Front panel

6. Control panel

7. Switch knob

8. Wire rack

9. Tray handle

10. Bake tray

11. Rotisserie handle

12. Rotisserie fork and rod

13. Crumb tray

14. Rotisserie basket and rod



This symbol on the outside of the oven glass door means:  
Do not touch hot surfaces.



## IMPORTANT SAFEGUARDS

When using an electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not place any part of the electric oven in water or other liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. When operating the oven, keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
9. Unplug from outlet when not in use, or before cleaning. Let it to cool before putting on or taking STOP parts, or before cleaning.
10. To disconnect, turn the control to STOP, then unplug the plug. Always hold the plug, but never pull the cord.
11. Do not cover CRUMB TRAY or any part of the oven with metal foil. This may cause overheating of the oven.
12. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
13. Oversized foods or metal utensils must not be inserted in a electric oven as they may create a fire or risk of electric shock.
14. A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
15. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
16. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
17. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
18. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
19. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, contact our consumer relations line before using the oven.
20. Do not use outdoors.
21. Do not use appliance for other than intended use.
22. This appliance is for HOUSEHOLD USE ONLY.
23. The temperature of the door or the outer surface may be higher when the appliance is working.
24. Protect against hurt by sharp edge when action.
25. Temperature of accessible surfaces may be high when the appliance is operating.
26. Do not rest cooking utensils or baking dishes on glass door.

 
**CAUTION:APPLIANCE SURFACES ARE HOT AFTER USE.ALWAYS wear protective, insulated oven gloves when touching hot oven or hot dishes and food, or when inserting or removing rack, pans or baking dishes.**

## SAVE THESE INSTRUCTIONS

**Caution: TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT OPERATE UNIT UNLESS THE REMOVABLE TOP TRAY IS IN PLACE.**

Please read and keep these instruction handy. These instruction will help you to use your Electric Oven to its fullest so that you will achieve consistent, professional results.

## SPECIAL CORD SET INSTRUCTIONS

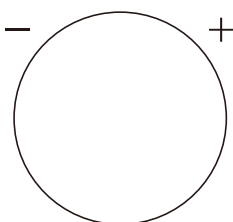

A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Longer extension cords are available and may be used if care is exercised in their use.

1. The electric rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or table top where they can be pulled on by children or tripped over accidentally.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or a similarly qualified person in order to avoid a hazard.

## PREPARING FOR USE

1. Unpack the unit.
2. Check the contents against the accessories list.
3. Select a suitable position for the unit on a flat surface close to a power socket but away from a heat producing appliance or areas where cooking grease or water may splatter onto it.
4. Plug into a suitable power outlet.

**We recommend that you run it at MAX temperature for approximately 15 minutes to eliminate any packing oil that may remain after shipping.**

# Operating Instructions

## CONTROL PANEL

### DISPLAY WINDOW

Shows set time or temperature and oven function.



1. Start

Press this button to START the oven.



2. Stop/  
Clear

Press this button once to STOP the oven. Press button twice to CLEAR oven current settings. Press button and hold for 3 seconds to activate/deactivate CHILD LOCK.



3. Press this button to select Top Heat + Bottom Heat + Convection function.



4. Press this button to select Top + Convection function.



5. Press this button to select Bottom Heat function.



6. Press this button to select Top Heat + Bottom Heat function.



7. Press this button to select Top Heat + Bottom Heat + Convection + Rotisserie function.



8. Press this button to select Top Heat + Rotisserie function.



9. Press button to toggle between Timer and Temperature setting. Timer range is 1---480 minutes, temperature range is 40---230°C.

 


10. Press this button will toggle on/off light.



11. Press button to select various auto cooking menus shown on the display window.

## OPERATION INSTRUCTIONS (show on DISPLAY WINDOW)

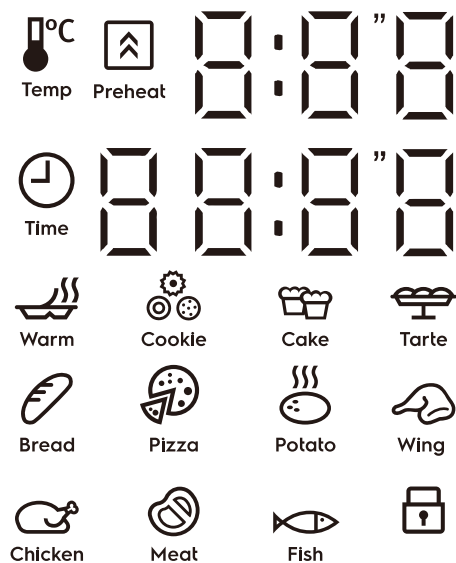

1. Temperature display, from 40°C---230°C, when in preheat phase, the “Preheat indicator” will blinking.



2. Timer display, from 1---480 minutes

1. The display range of the baking time is: 1-480 minutes, and the screen display format is 0:00, "hours: minutes". For example, 55 minutes is displayed as 0:55; 65 minutes is displayed as 1:05.
2. When the oven is not working, if no operation is performed within five minutes, the oven will automatically enter the clock display. Press and hold the clock button for 3 seconds to set the clock. The setting is 1 Minutes/steps increase or decrease.



### 3. Warm

This is a selection under AUTO cook menu using upper + lower heating at 40°C for 50 minutes.

Note: the reference weight of the baked food (dough) is around 0.8kg.



### 4. Potato

This is a selection under AUTO cook menu using upper + lower heating at 200°C for 70 minutes.

Note: the reference weight of potato is around 0.15kg/piece, total 6 pieces. (total weight is 0.9kg)



### 5. Cookie

This is a selection under AUTO cook menu using upper + lower heating at 160°C for 30 minutes.

Note: the reference weight is around 0.025kg/piece, total 12 pieces.



### 6. Pizza

This is a selection under AUTO cook menu using upper + lower heating at 180°C for 20 minutes.

Note: the reference weight is around 0.5kg (10 inches).



### 7. Tarte

This is a selection under AUTO cook menu using upper + lower heating at 190°C for 40 minutes.

Note: the reference weight is around 0.04kg/piece, total 12 pieces.



### 8. Cake

This is a selection under AUTO cook menu using upper + lower heating at 160°C for 45 minutes.

Note: the reference weight is around 0.8kg.



### 9. Bread

This is a selection under AUTO cook menu using upper + lower heating at 170°C for 13 minutes.

Note: the reference weight is around 0.08kg/piece, total 6 pieces.



### 10. Wing

This is a selection under AUTO cook menu using upper + lower heating convection at 210°C for 20 minutes.

Note: the reference weight is around 0.035kg/piece, total 18 pieces.



### 11. Fish

This is a selection under AUTO cook menu using upper + lower heating + convection at 210°C for 30 minutes.

Note: the reference weight is around 0.8kg/piece.



### 12. Meat

This is a selection under AUTO cook menu using upper + lower heating + convection at 210°C for 30 minutes.

Note: the reference weight is around 0.5 kg/piece, thickness is about 3mm.



### 13. Chicken

This is a selection under AUTO cook menu using upper + lower heating at 220°C for 50 minutes.

Note: the reference weight is around 1.2 kg to 1.5kg a piece.



14.

Press this button, then oven start work activate Child Lock. When Child Lock is on, to deactivate Child Lock, press and hold STOP for 3s.

#### **Note:**

1. The setting of the auto cooking is the recommended baking temperature and time, which may vary depending on the type, temperature, quantity, weight, and container of the ingredients. So please adjust according to the actual ingredients and needs.
2. For better cooking effect, please do not use a bake tray under the roast chicken or add fruits and vegetables to block heat.
3. The auto menu is only suitable for designated foods, and it is not recommended to cook multiple foods together.

## **ACCESSORIES**

- **Wire rack**- supports casserole dishes and general cooking pans.
- **Bake tray** - for baking cookies, cakes etc. and also for collecting excess fats and juices.
- **Tray handle** - use this accessory to remove food tray when hot.
- **Rotisserie basket** - includes rotisserie rod x 1, basket x 1, screw x 2.

insert the rod from the center of the basket, then put the food into the basket and lock, insert the rod (round edge end) into the groove on the right side of the oven, and then insert the other side of the rotating spit one end (square edge) is placed on the holder on the left side of the oven.

**Note: the rotisserie basket can not cook the food which becomes soft after cooking, such as potatoes and sweet potatoes, also can not cook meat.**

- **Rotisserie fork** – includes rotisserie rod x 1, rotisserie fork x 2, screw x 2. Insert the rotisserie rod into the chicken. Then secure the rod with the rotisserie forks with the pointed ends of the forks facing the center of the rod. Fasten the screws to tighten the forks.

**Note: the rotisserie kit can carry food up to 3kg.**

Insert the rod (rounded edge end) into the slot on the right of the oven, then rest the other end of the rod (squared edge end) on the catch on the left

## **FOOD TRAY POSITIONING**

This oven can bake breakfast (bread, cake and steam cake), as well as dishes (roast pork, spare ribs, fish, chicken, goose, duck, peanuts, etc) with the perfection in colour, taste and aroma. While cooking large piece of food, change position of the tray in order to allow the food to be baked evenly.

- The food tray can be adjusted to 3 different positions according to the food you want to cook.

**Note:** it may be necessary to change the food tray to a lower position if the surface is too brown or change it to a higher position if the base is browning.

## **MAINTENANCE INSTRUCTIONS**

**ALWAYS UNPLUG OVEN AND ALLOW TO COOL BEFORE CLEANING**

If desired, wipe walls with damp sponge, cloth or nylon scouring pad, and mild detergent. **DO NOT USE STEEL WOOL SCOURING PADS OR ABRASIVE CLEANERS OR SCRAPE WALLS WITH METAL UTENSILS, AS THIS MAY DAMAGE THE INTERIOR.**

Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door clean with a damp sponge and wipe dry with a paper or cloth towel. Clean exterior with damp sponge. **DO NOT USE AN ABRASIVE CLEANER. AS IT MAY DAMAGE THE EXTERIOR FINISH.**

**DO NOT USE AN ABRASIVE CLEANER OR STEEL WOOL SCOURING PAD ON DRIP PAN, AS IT MAY DAMAGE THE FINISH.**

**DRY ALL PARTS AND SURFACES THOROUGHLY PRIOR TO PLUGGING OVEN IN AND USING.**

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.

## CLEANING INSTRUCTIONS

1. Always unplug and allow to cool completely before cleaning or moving.
2. Clean the Food Pan, Wire Rack, Food Pan handle and Crumb Tray after each use. The Crumb must be in position before using.
3. Clean the interior of Electric Oven and all removable parts with a mild non-abrasive cleaner and a plastic scouring pad after each use. Rinse and dry thoroughly. Do not rub too hard as the interior surface of the oven can be scratched.
4. Clean the Glass Oven Door and Electric Oven exterior with glass cleaner or mild detergent and a damp cloth or plastic scouring pad. Do not use an abrasive cleaner or pad as they might scratch the finish.
5. Rinse and dry thoroughly with a clean cloth. Allow to dry before closing Glass Door.
6. This appliance requires almost no maintenance, and it contains no user-serviceable parts.
7. Do not try to repair it yourself. If the product requires service, please contact a qualified electrical service technician.

## TO STORE

Unplug unit, allow to cool, and clean before storing. Store Electric Oven in its box in a clean, dry place. Never store appliance while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

## NTC fault prompt description

1. In the temperature position of the digital screen, if the character "E1" appears, the buzzer will beep three times, indicating that the upper NTC is open, and the character "E2" appears, and the buzzer will beep three times, indicating that the upper NTC is short-circuited, and "E3" appears. Characters, the buzzer will beep three times (for sound requirements, please refer to the attached sound file), it means that the NTC is open, and the character "E4" appears, and the buzzer will beep three times, which means that the NTC is short-circuited.
2. When the "E1" and "E3" prompts appear, check whether the NTC port is loose or poorly connected. When the "E2" and "E4" prompts appear, check whether the NTC port or line is short-circuited.

## Disposal


### Disposal

#### Packaging materials

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose the packaging materials in the appropriate container at the community waste disposal facilities.

## Old appliance



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## 安全建議

使用電器產品時，請隨時遵守下列基本安全預防措施：

 
- 使用電器前請先閱讀使用說明，並妥善保管使用說明書以備日後參考。
- 請勿觸碰高溫表面，請使用把手或旋鈕操控機器。
- 兒童使用或靠近電器時請務必密切監督。
- 為預防觸電，請勿將任何電烤箱零件放入水或任何液體中。
- 請勿讓電線繞過桌緣或是碰觸高溫表面。
- 如電線或插頭有受損狀況，請勿操作電器。當電器發生故障或於使用後損壞，請將電器送至附近的授權服務中心或原廠維修中心進行檢查或維修。
- 使用非電器製造商推薦之配件可能會導致危險或受傷。
- 不使用電器或清潔前請先拔除插頭。請先等待電器降溫再行安裝、拆卸配件或清潔。
- 如欲切斷電源，請按停止/消除設定鍵。按一次可停止烤箱運轉；按兩次可消除烤箱目前的設定值。
- 請勿使用鋼絲絨進行清潔。鋼絲絨會損壞電器表面，接觸到電器零件時也可能會造成觸電。
- 不可將體積過大的食物或金屬器皿放入電烤箱中，否則可能有觸電風險。
- 使用材質為金屬或玻璃以外的容器須特別謹慎小心。
- 請勿將下列物品放入烤箱：紙板、塑膠、紙張或任何類似物品。
- 除了製造商建議的配件之外，於不使用烤箱時，請勿將任何物品放置於烤箱內。
- 將食物放入高溫烤箱或是取出食物時，請隨時配戴可防燙及絕緣的烤箱專用手套。
- 此電器不應透過外部計時器或遠端控制進行操作。
- 此電器配有強化安全性玻璃門板，此材質比一般玻璃更堅固。強化玻璃還是有碎裂的可能性，但其碎片不會產生銳利的邊角。請避免刮傷門板表面或使邊緣出現刻痕。如果門板出現刮痕或刻痕，使用烤箱前請先撥打客戶服務專線詢問。
- 請勿於室外使用。
- 請勿將電器使用於適用用途以外的目的。
- 此電器僅供家庭使用。
- 此電器不適合由身體、感覺或精神能力衰弱或是缺乏經驗及知識者(包括兒童)使用，除非有其他人監督或指示其如何使用電器並負責其安全。
- 兒童應由成人監督以避免其玩弄電器。
- 托盤/烤架上的食物重量建議不超過3.5公斤。
- 請勿將食材皆擺放在烤盤或烤架的同一側。請均勻放置食材。






## 注意

- 烤箱擺放的位置若太靠近牆壁，牆面可能會燒壞或染色。也請確保窗簾未接觸到烤箱。
- 請勿將任何物品放置在烤箱下方與桌面之間的空間；否則物品可能會燒壞。
- 操作烤箱時，請為烤箱周圍的各個方向預留至少10公分的空間，以利空氣適當流通。建議烤箱頂部與上層廚櫃底部保留至少30公分空間。

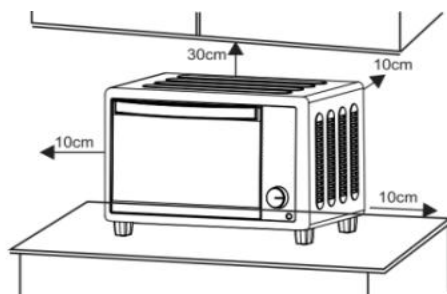

 
- 電器後方應該靠牆擺放。
- 勿使用金屬箔紙覆蓋任何烤箱零件，可能會造成烤箱過熱。
- 使用烤箱時，請勿將任何物品放置於烤箱上方。加熱可能會導致變形、裂開等情況。
- 操作烤箱時，請勿讓烤箱被覆蓋或接觸到易燃物品，包括窗簾、垂布、牆面等等，否則可能導致火災。
- 請勿將炊具或烤盤放置在玻璃門板上，否則可能導致烤箱摔落。

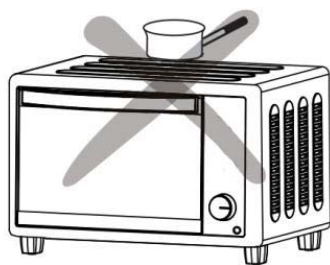

- 電器運作時，門板或外層表面的溫度可能較高。
- 烤箱使用期間，金屬零件及玻璃門板會變得很燙，請留意在開關玻璃門時不要觸碰到。



 - 請透過正確接線的插座連接交流電源。請將插頭完全插入插座；插頭未完全插入可能導致異常發熱。
- 請勿使用電燈插座。切勿在相同插座上連接多個插頭。

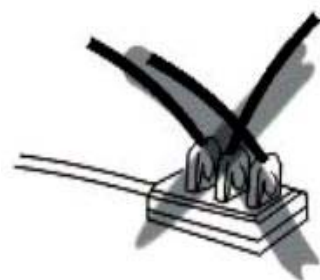




## 注意

- 使用後的電器表面很燙。要碰觸高溫烤箱、高溫碗盤及食物、要放入或取出烤架、餐盤或烤盤時，請隨時配戴保護性絕緣烤箱專用手套。
- 要放入或取出烤盤時，請隨時使用取物夾。否則可能導致燙傷。



 - 烤箱很燙時，請勿對玻璃門灑水。否則可能造成玻璃碎裂。

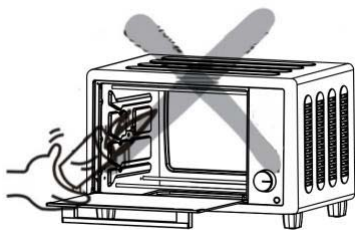

- 拔除電線時，請務必握住插頭本身，切勿拉扯電線，因可能會造成電線內部的線路斷裂。



- 使用烤箱時，請勿將烤箱放置在瓦斯爐或其他高溫源的周圍，亦勿將電扇朝向烤箱吹，如此將會防礙烤箱達到正確的溫度控制。
- 手濕時請勿碰觸電源線或烤箱。使用後請隨時拔除電線。故障電器的插頭連接至插座可能導致火災危害。




- 烹煮會噴濺油漬的食物，例如烤雞時，建議在托盤上鋪2層鋁箔紙，以減少油汙噴濺。



請閱讀使用說明並妥善保管。這些說明將能幫助您充分運用電烤箱，持續達到專業效果  
注意：為了減少火災或電擊風險，若未放置活動式上層托盤，不得操作烤箱。

## 烤箱組件：

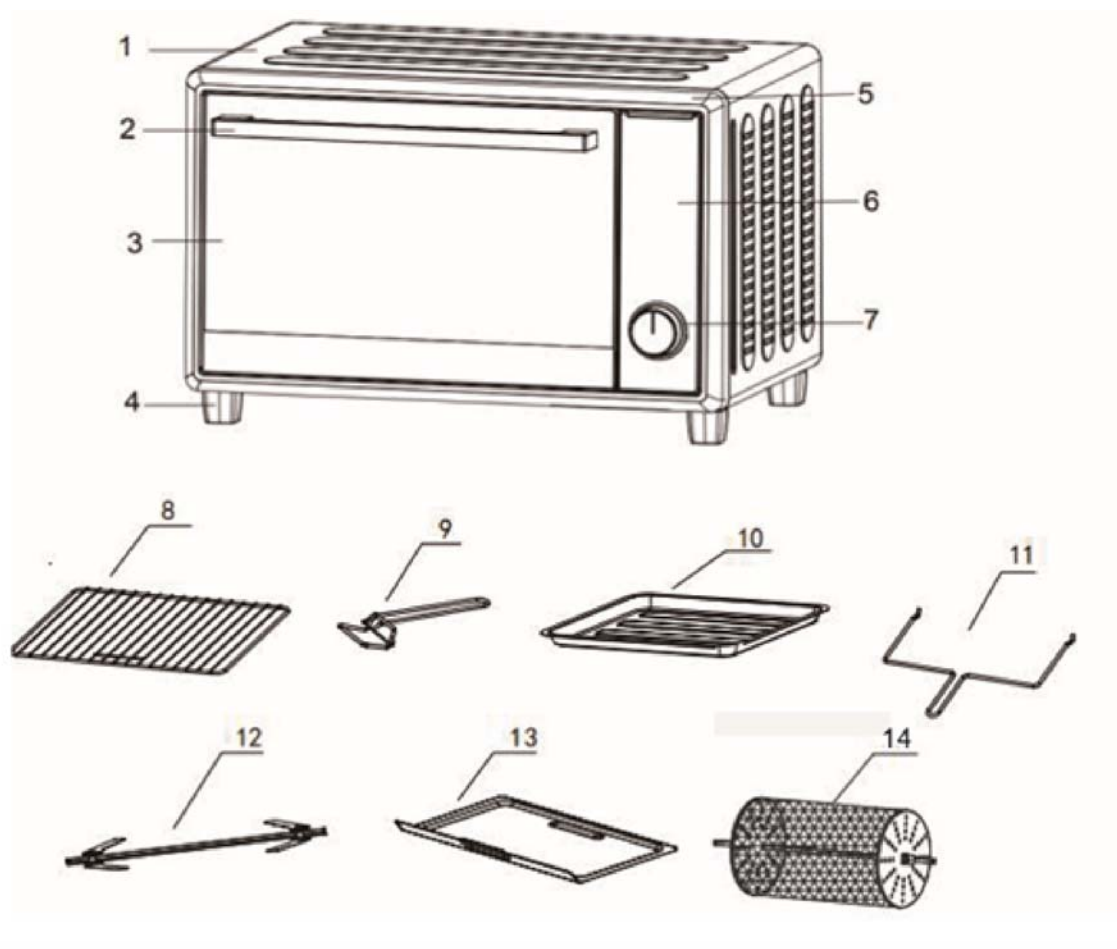 

- |         |         |              |
|---------|---------|--------------|
| 1. 外殼   | 5. 前面板  | 10. 烤盤       |
| 2. 機門把手 | 6. 控制面板 | 11. 旋轉烤叉取物夾  |
| 3. 玻璃門  | 7. 操控旋鈕 | 12. 旋轉烤叉和轉軸  |
| 4. 烤箱腳架 | 8. 燒烤架  | 13. 可拆式麵包集屑盤 |
|         | 9. 取盤夾  | 14. 旋轉烤籠和轉軸  |



烤箱玻璃門外此標誌代表：請勿觸摸高溫表面。

特殊電線組件使用說明：



本產品提供長度較短的電源線，以降低電線纏繞或被電線絆倒的風險。  
若謹慎使用，可搭配長度較長的延長線。

 
- 1.延長線的電功率額定值應至少與電器相等。
- 2.延長線的電源線務必妥善放置，勿使其垂掛於桌面，以免兒童拉扯或意外絆倒。
- 3.若電源線受損，請務必由製造商、服務代理商或類似的合格人員進行更換，以避免危險。



開始使用前：

- 1.打開烤箱外包裝。
- 2.對照配件清單檢查內容物。
- 3.選擇適合擺放烤箱的位置，建議選擇鄰近插座的平坦表面，但是請遠離發熱性電器或是煮菜時可能噴濺油水的區域。
- 4.請將插頭連接至適當電源插座。

初次使用前建議將烤箱調整至最高溫度運轉約15分鐘，以消除運送後可能殘留的氣味

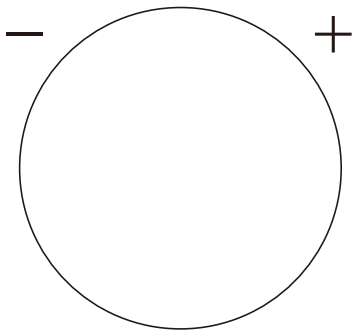

## 操作說明：

### 控制面板

顯示視窗將顯示時間、溫度設定值及烤箱功能。



1. 啟動

按此按鍵以啟動烤箱。



2. 停止/消除設定

按一次可停止烤箱運轉。按兩次可消除烤箱目前的設定值。長按3秒可啟動或關閉兒童安全鎖。



3.

按此按鍵以選擇上火 + 下火 + 旋風功能。



4.

按此按鍵以選擇上火 + 旋風功能。



5.

按此按鍵以選擇下火功能。



6.

按此按鍵以選擇上火 + 下火功能。



7.

按此按鍵以選擇上火 + 下火 + 旋風 + 旋轉燒烤功能。



8.

按此按鍵以選擇上火 + 旋轉燒烤功能。



9.

按此按鍵以切換計時器及溫度設定。計時器的計時範圍為1-480分鐘，溫度範圍為40-230° C。



10.

 
按此按鍵可打開或關閉照明燈。

## 11.

按此按鍵以選擇顯示視窗上所顯示的各種自動烹煮食譜。

### 操作說明

顯示於螢幕顯示器

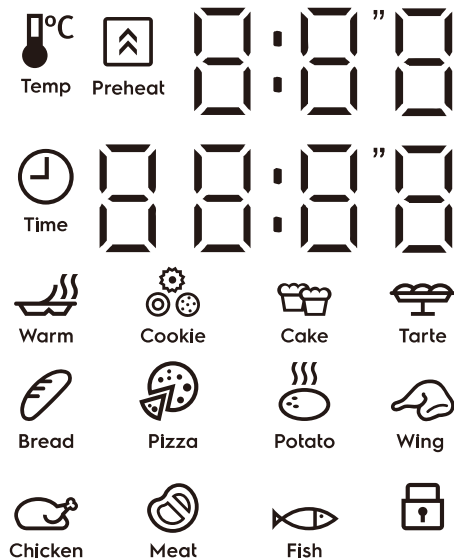

溫度顯示範圍為40 ° C-230 ° C，選擇預熱功能時，「預熱指示燈」將會閃爍。



時間顯示範圍為1-480分鐘。

1. 烘焙時間顯示範圍為：1—480分鐘，屏幕顯示格式為 0：00，“小時：分鐘”。

比如55分鐘顯示為0：55；65分鐘顯示為1：05。

2. 待機時鐘，使用標準的24小時制，在烤箱不工作的狀態下，五分鐘內不進行操作，烤箱將自動進入時鐘顯示，長按時鐘觸摸鍵3秒，可進行時鐘設置，設置以1分鐘/步遞增或遞減。



這是自動烹煮食譜的選項之一，利用上層 + 下層加熱至40° C，持續50分鐘。

注意：烘焙食品（麵團）的參考重量約為0.8kg。



4. 馬鈴薯

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱至200° C，持續70分鐘。

注意：馬鈴薯的參考重量約為0.15kg/個，共6個。（總重量為0.9kg）



#### 5. 餅乾

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱至160° C，持續30分鐘。  
注意：參考重量約為0.025kg /個，共12個。



#### 6. 披薩

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱至180° C，持續20分鐘。  
注意：參考重量約為0.5kg (10英寸)。



#### 7. 塔派

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱至190° C，持續40分鐘。  
注意：參考重量約為0.04kg /個，共12個。



#### 8. 蛋糕

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱至160° C，持續45分鐘。  
注意：參考重量約為0.8kg。



#### 9. 麵包

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱至170° C，持續13分鐘。  
注意：參考重量約為0.08kg /個，共6個。



#### 10. 雞翅

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱 + 旋風至210° C，持續20分鐘。  
注意：參考重量約為0.035kg /隻，共18隻。



#### 11. 魚

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱 + 旋風至210° C，持續30分鐘。  
注意：參考重量約為0.8kg /條。



#### 12. 肉

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱 + 旋風至210° C，持續30分鐘。  
注意：參考重量約為0.5 kg /塊，厚度約為3mm。



#### 13. 雞

這是自動烹煮食譜的選項之一，利用上層 + 下層加熱至220° C，持續50分鐘。  
注意：參考重量約為每件1.2公斤至1.5公斤。



#### 14.

按此按鍵以啟動兒童安全鎖。欲關閉兒童安全鎖，請長按停止鍵3秒。

注意：

1. 自動烹煮食譜的設置為建議烘烤溫度與時間，僅供參考。烘焙效果可能會因食材的種類、成分、溫度、數量、重量、盛裝容器的不同而有所變化，建議使用者可於自動烹煮食譜程式完成後，依據實際食材與烘烤需求做調整。
2. 為了達到更好的烘烤效果，請不要在烤雞下面使用烤盤接油或增加蔬果阻擋熱量。
3. 自動菜單僅適用於指定的食物，不建議同時煮多種食物。

## 配件使用說明

- 燒烤架- 支撐淺鍋和一般的平鍋。
- 烤盤- 用於烘烤餅乾、糕點等，也可用於收集多餘油脂和汁液。
- 烤盤取盤夾- 用於取出燙熱的烤盤。
- 旋轉烤籠- 包括轉軸1支，旋轉烤籠1支，固定螺絲2個，將轉軸從轉籠中心插入，放入待烤食材後將烤籠鎖緊，並將轉軸(圓形邊緣端)插入烤箱右側的槽中，接著將轉軸的另一端(方形邊緣)放在烤箱左側固定架上。  
注意：旋轉烤籠不能烹飪煮食後變軟的食物，如馬鈴薯和地瓜；也不能烹飪肉類。
- 旋轉烤叉組- 包括轉軸1支，旋轉烤叉2支，固定螺絲2個，將轉軸插入雞肉，然後用旋轉烤叉的尖端能面向轉軸的中心，再轉緊固定螺絲好讓旋轉烤叉與轉軸固定。將轉軸（圓形邊緣）插入烤箱右側的槽中，然後將轉軸的另一端（方形邊緣）放在左側的固定架上。  
注意：旋轉烤叉組可以撐起3公斤以下的食物
- 旋轉烤叉取物夾 - 用於從烤箱中取出轉軸。  
注意：烘烤後的轉軸很燙，請勿觸摸。

## 食物烤盤位置

本烤箱能烹調出色香味俱全的早餐（麵包、蛋糕、饅頭）與正餐（烤豬肉、排骨、魚、雞、鵝、鴨、花生等）。烘烤大塊食物時，需不時改變烤盤的位置，以使食物受熱均勻。

- 按照所需食物，將食物烤盤調節至 3 個不同位置。

注意：如果食物表面烤焦，請將烤盤位置調低。如果底層烤焦，則請將烤盤位置調高。

注意：建議將烤箱先進行預熱，再放入需要烘烤的食材，尤其是進行西點烘焙及烘烤肉類時，可減少肉類產品的肉汁流失。

## 產品保養說明

清潔前請務必拔除插頭並等待烤箱冷卻

如有需要，您可以使用稍微沾濕的海綿、濕布或尼龍菜瓜布及溫和洗潔劑擦拭烤箱壁面。

請勿使用鋼絲絨、研磨清潔用品或是使用金屬用具擦拭壁面，否則可能會損壞烤箱內部。

使用熱的肥皂泡沫水或洗碗機來清洗所有配件。

請以稍微沾濕的海綿將烤箱門及烤箱外部擦拭乾淨，再使用紙巾或布巾擦乾。

請勿使用研磨清潔劑，否則可能會損壞外層烤漆。

請勿使用研磨清潔劑或鋼絲絨清潔油滴盤，否則可能會損壞烤漆。

連接烤箱插頭及使用前，請先將所有零件與表面徹底擦乾。

此電器幾乎無須維修，亦未含有可由使用者進行維修的零件。

請勿自行嘗試維修。若產品需要服務，請聯絡合格的電器維修技術人員。

## 清潔說明

1. 清潔前或搬動前請務必拔除插頭並等待烤箱完全冷卻。

2. 每次使用後，請清潔食物烤盤、電線架、烤盤取物夾及集屑盤。使用前務必將集屑盤放入烤箱。

3. 每次使用後，請使用溫和、非研磨清潔用品與塑膠菜瓜布清潔電烤箱內部及所有可拆式零件，並用乾布或紙巾擦乾。  
請勿過度用力摩擦烤箱內部表面，以免造成刮傷。

4. 請使用玻璃清潔劑、溫和洗潔劑、濕布或塑膠菜瓜布來清潔烤箱玻璃門及電烤箱外部，靜待乾燥後再關閉玻璃門板。  
請勿使用研磨清潔劑或菜瓜布，以免刮傷烤漆。



## 存放方式

長時間不使用並需要收存前，請先拔除插頭，等待烤箱冷卻並完成清潔。請將電烤箱放入原紙箱，存放於乾淨乾燥處。切勿收存呈現高溫或仍連接插座的電器，並避免將電線緊密纏繞於電器周圍。請勿對電線連接電器處施加任何壓力，以免造成電線磨損及斷裂。

## NTC故障提示說明

- 1.數碼屏溫度位置，如果出現“E1”字符，蜂鳴器鳴三聲提示，為上NTC開路，出現“E2”字符，蜂鳴器鳴三聲提示，為上NTC短路，出現“E3”字符，蜂鳴器鳴三聲提示（聲音要求見附件聲音文件），為下NTC開路，出現“E4”字符，蜂鳴器鳴三聲提示，為下NTC短路。
- 2.出現“E1”與“E3”提示時，需檢查NTC端口是否有松脫或接觸不良，出現“E2”與“E4”提示時，需檢查NTC端口或線路是否有短路現象。


## 廢棄處理

### 包裝材料

包裝材料符合環保要求並可循環使用。塑膠元件以>PE<、>PS<等標記識別。請將包裝材料棄置在公共廢品處理設施的適當回收容器中。

### 舊設備



產品上或其包裝上的  標記表示不能把該產品作為家庭垃圾般處理。應該將其棄置在電氣與電子設備廢品的適當回收站點。透過確保正確棄置本產品，您也可以幫助避免由於不適當處理廢品而為環境和人類健康帶來潛在的負面影響。如需關於回收本品的更詳細資訊，請聯絡您當地的廢物回收部門或您的家庭垃圾處理服務點。

有鑒於世界各國對綠色環保意識的重視，伊萊克斯依循RoHS「危害性限制物質指令」誠實標示產品化學物質含量，關於本產品的RoHS聲明書，請上伊萊克斯官網→「支援服務」→「RoHS聲明書」，依產品類別及型號檢索。  
<http://www.electrolux.com.tw/Support/Customer-Care/>

## 客服聯繫資訊

<p>台灣 新加坡商伊萊克斯股份有限公司台灣分公司 22065新北市板橋區縣民大道二段68號9F 免付費客服專線: 0800-888-259 傳真: 886-2-8964-5269 電郵: <a href="mailto:service.tw@electrolux.com">service.tw@electrolux.com</a> 網站: <a href="http://www.electrolux.com.tw">www.electrolux.com.tw</a></p>	<p>Hongkong Service Hotline: (+852) 3193 9888 OCH Electrical Appliances Services Centre 5/F, OCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong</p>
<p>Indonesia Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email:<a href="mailto:customercare@electrolux.co.id">customercare@electrolux.co.id</a> SMS &amp; WA: 0812.8088.8863</p>	<p>Singapore Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 1 Fusionopolis Place, #07-10 Galaxis, West Lobby Singapore 138522. Office Fax: (+65) 6727 3611 Email : <a href="mailto:customer-care.sin@electrolux.com">customer-care.sin@electrolux.com</a></p>
<p>Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 5999 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28,Jalan 15/22, Taman Perindustrian Tiong Nam,40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : <a href="mailto:malaysia.customercare@electrolux.com">malaysia.customercare@electrolux.com</a></p>	<p>Philippines Consumer Care Center Toll Free : 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 Website : <a href="http://www.electrolux.com.ph">www.electrolux.com.ph</a> Email : <a href="mailto:wecare@electrolux.com">wecare@electrolux.com</a></p>
<p>Thailand Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkok, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : <a href="mailto:customercarethai@electrolux.com">customercarethai@electrolux.com</a></p>	<p>Vietnam Consumer Care Center Toll Free: 1800-58-88-99 Tel: (+84 28) 3910 5465 Electrolux Vietnam Ltd. Floor 9th, A&amp;B Tower 76 Le Lai Street - Ben Thanh Ward - District 1 Ho Chi Minh City , Vietnam Office Tel: (+84 28) 3910 5465 Office Fax: (+84 28) 3910 5470 Email: <a href="mailto:vncare@electrolux.com">vncare@electrolux.com</a></p>



